 
 
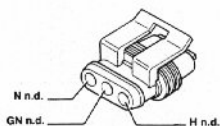 
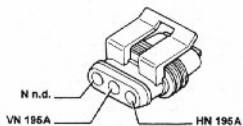 
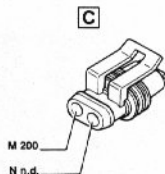 


1 Front left headlamp

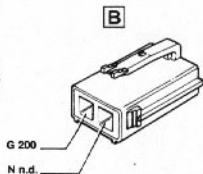

2 Front left lights cluster

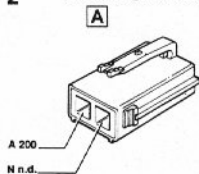


3 Front left earth


N 64	N 101
N 104C	N 200 ▲
N 53A	N 256
N 53A	N 85
N 53B	N 251
N 53B	N n.d.
N 11	N 322
N 96I	N 149A
N 133	N 78
N 195B	N 96H
N 195B	



 
4 Sensor on front left wheel (A.B.S.)



5 Front left brake pad wear sensor

 


 6 Diagnostic socket for anti-lock braking system (A.B.S.)

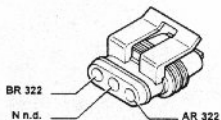





**15** Earth on bodywork

 


**17** Hazard warning lights switch

 


**18A** Ignition coil

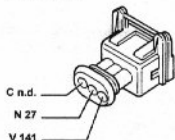 


**18B** Ignition coil

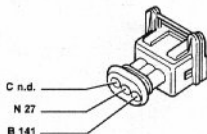 


**18C** Ignition coil

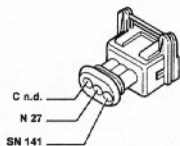 

**18D** Ignition coil

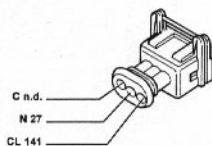 


**18E** Ignition coil

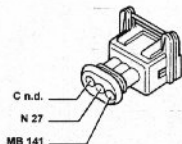 


P3NCC5NLD2

**55.**

 
**19** Timing variator solenoid

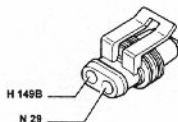


**20** Fuel pump supply relay

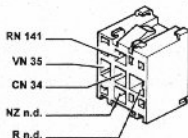 


**21** Injector control relay

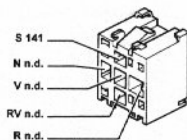 


**23** HALL effect phase sensor

 


**24** Three diode container

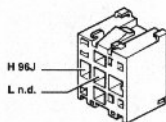 


**25** 60A ABS maxi fuse

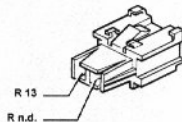 

**27** Earth on engine

 


 **28** Engine coolant temperature sensor




P3N06N.L02

 
**29** Earth on engine

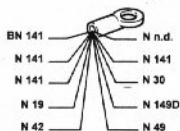


**30** Air flowmeter

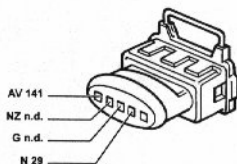 


**31** Throttle valve potentiometer

 

**34** 10A fuse protecting Lambda probe

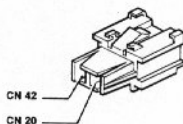 


**35** 7.5A fuse protecting fuel pump

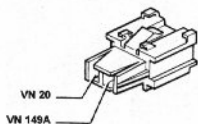 


**36** Rear earth on rear window pillar



 **38** Knock sensor 1




**39** Knock sensor 2

 


F3107N.02

**55.**

 
**40** Sunroof electronic control unit

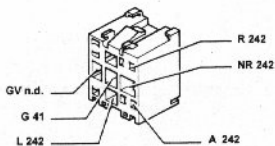


**41** Electric sunroof button

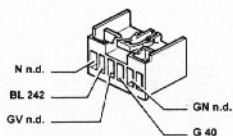 


**42** Heated Lambda probe

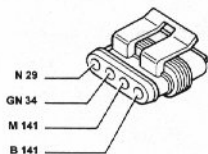 


**43** Over-Boost solenoid

 


**44** Air temperature sensor

 


**45** Rpm and T.D.C. sensor

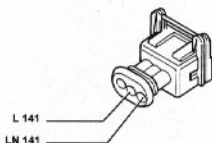 

 **46** Resistor for switching on engine cooling fan low speed




**47** Engine cooling fan (2nd)

 


P25080201

 
**53** Fuel injectors

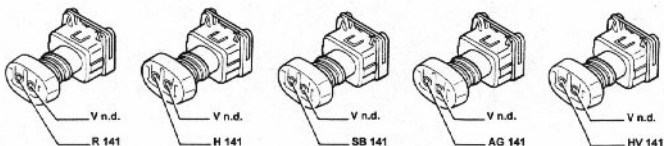


**49** Fuel injection diagnostic socket

 


**53A** Windscreen washer remote switch

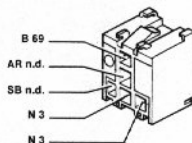 

 
**53B** Rear window washer remote switch

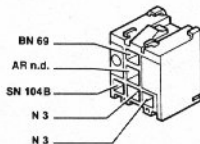


**54** Engine cooling fan

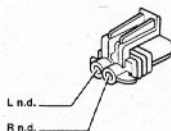 

**57** Oil pressure sender unit

 

 
**58** Engine oil temperature sender unit



P3K38RLE01

# 55.

 
**59** Low oil pressure warning light switch




**61** Engine coolant temperature sender unit



 
**62** Pulse generator for speedometer signal

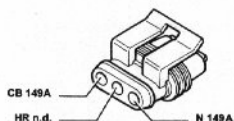

**63** Starter motor

 


**64** Windscreen wiper motor

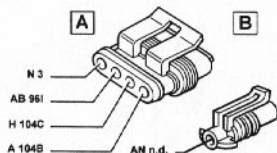 


**65** Alternator



 **66** 10A fuse protecting Fiat CODE electronic control unit

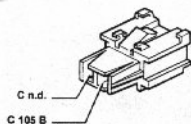

 
**69** Windscreen/rear window washer pump




P3N13N/102



 72 Headlamp washer pump




73 Front right earth

 


74 Front right lights cluster

 
A

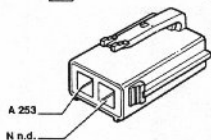



B

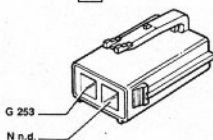 


C

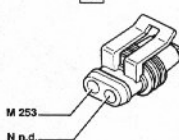 


75 Front right headlamp

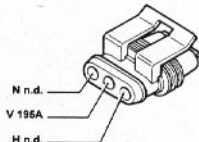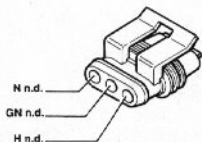  

 76 Relay for switching on engine cooling fan high speed

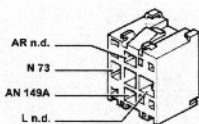

 
78 Button bonnet for switching on anti-theft device




PSM11/001

# 55.

 
**80** Sensor on front right wheel (A.B.S.)



 
**81** Front right brake pad wear sensor




**82** Front right side repeater

 


**83** Front right speaker

 


**85** Front left side repeater

 


**86** Front left loudspeaker

 

 **87** Electrically-adjustable and heated left exterior rearview mirror

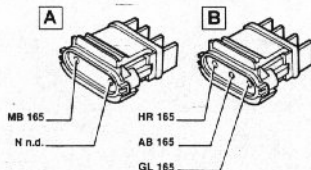

**88** Courtesy light front left button

 

P3H12N4L1