

Service Manual

GALANT

1989-1990-1991-1992-1993
Volume 2
Body & Electrical

FOREWORD

This Service Manual has been prepared with the latest service information available at the time of publication. It is subdivided into various group categories and each section contains diagnostic, disassembly, repair, and installation procedures along with complete specifications and tightening references. Use of this manual will aid in properly performing any servicing necessary to maintain or restore the high levels of performance and reliability designed into these outstanding vehicles.

WE SUPPORT
 VOLUNTARY TECHNICIAN
 CERTIFICATION THROUGH
 National Institute for
**AUTOMOTIVE
 SERVICE
 EXCELLENCE**



Mitsubishi Motors Corporation reserves the right to make changes in design or to make additions to or improvements in its products without imposing any obligations upon itself to install them on its products previously manufactured

GROUP INDEX

M00AA-


General	
Fusible Link and Fuse Location	
Inspection Terminal Location	
Grounding Location	
Diode Location	
Junction Block	
Centralized Junction	
Inspection of Harness Connector	
Configuration Diagrams	
Circuit Diagrams	
Steering	37A
4 Wheel Steering System	37B
(4WS) Body	42
Exterior	51
Heater, Air Conditioning	55
and Ventilation	
Engine Electrical	16
Chassis Electrical	54
Alphabetic Index	

NOTE:

For information concerning all components other than the electrical system and on-vehicle service procedures for engines and transmissions, refer to Volume 1 "Chassis & Body" of this paired Service Manual. For overhaul procedures of engines or transmissions, refer to the separately issued Engine Service Manual or Manual/Automatic Transmission Service Manual.

FUSIBLE LINK AND FUSE LOCATION



<Engine compartment>

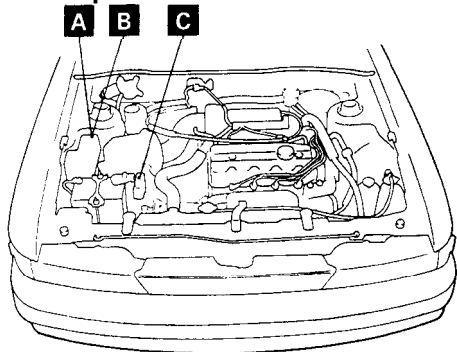


Name	Symbol
Dedicated fuse block	B
Fusible link box (main fusible links and sub fusible link)	C
Multi-purpose fuse block	D
Sub fusible link-block	A

NOTE


- (1) For details of fusible link and fuse, refer to P.12.
- (2) The "Name" column is arranged in alphabetical order.

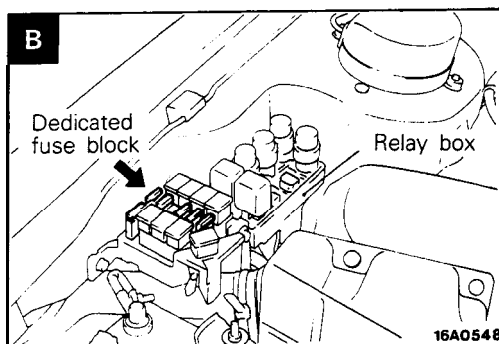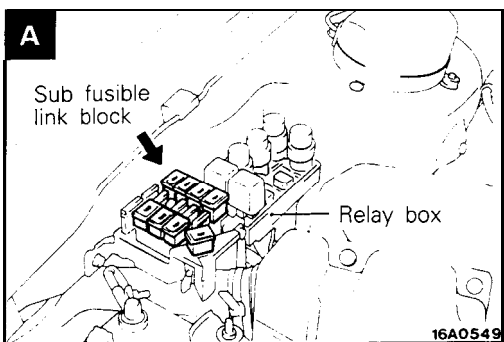



<Up to 1990 models (vehicles without ABS)>

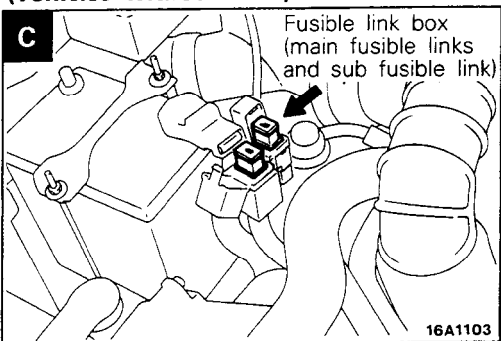

<Up to 1990 models (vehicles with ABS)> <From 1990.5 models>

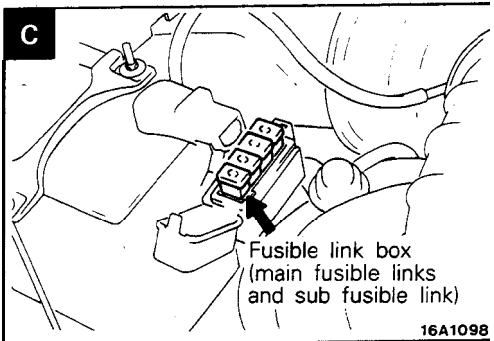

<Interior>

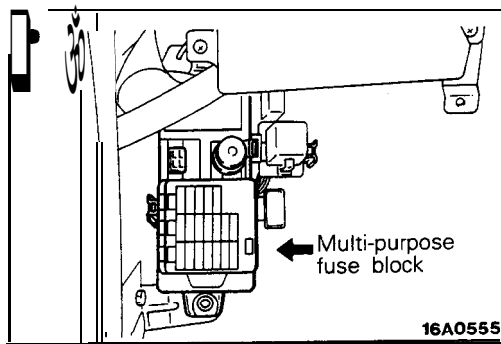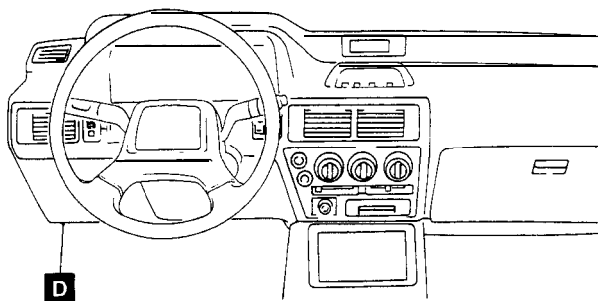

13A0218

16A0555


INSPECTION TERMINAL LOCATION

Name	Symbol	Name	Symbol
Engine speed detection connector* <DOHC>	C	Oxygen sensor check connector <DOHC>	D
Fuel pump check connector	A	Data link connector	E
Ignition timing adjustment connector	B		


NOTE

- (1)*: <From 1990 models>
- (2) The "Name" column is arranged in alphabetical order.

<Engine compartment>

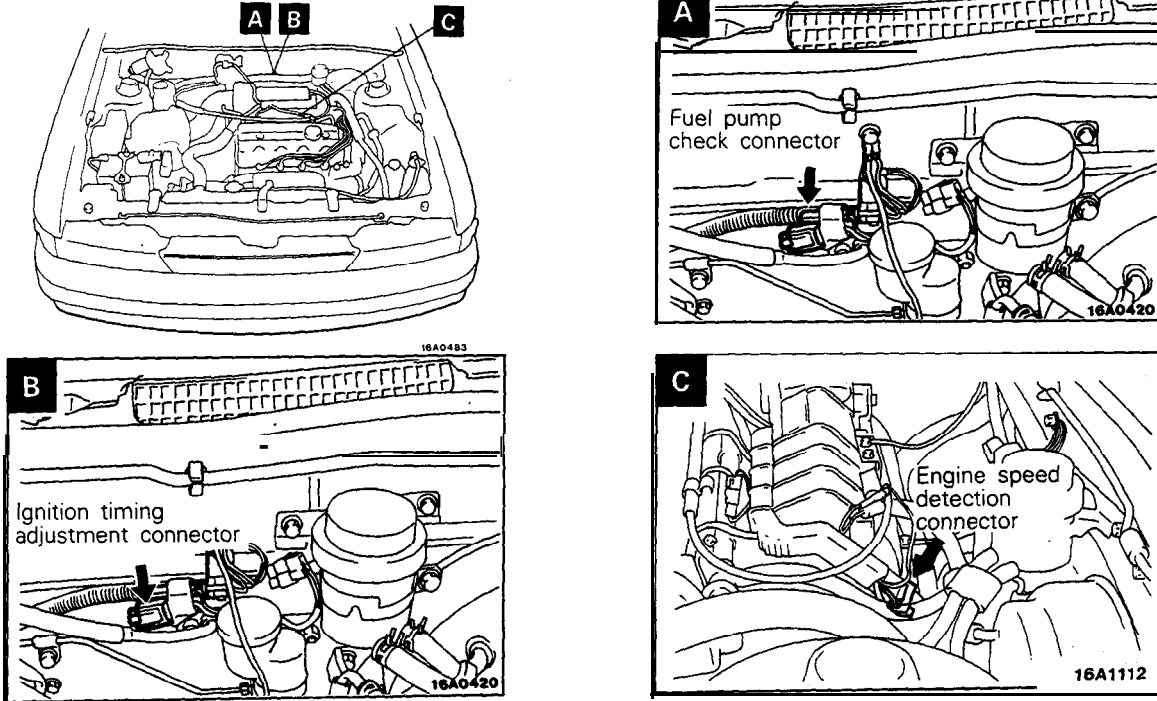







<Interior>

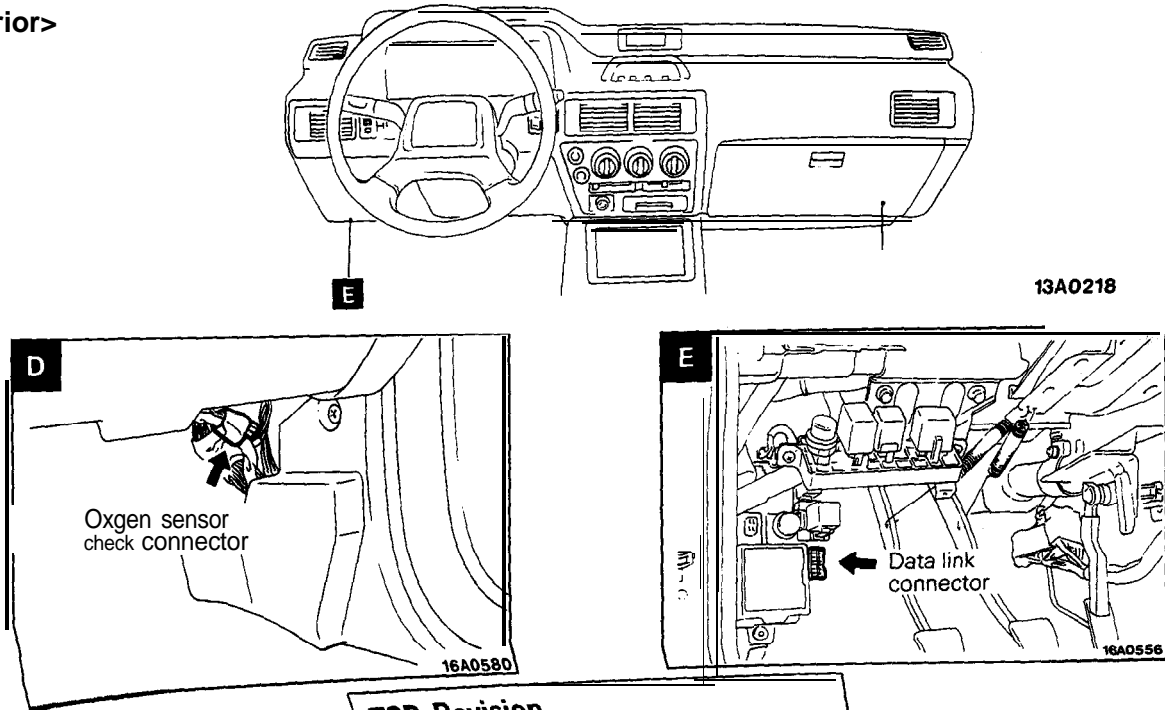

TSB Revision






GROUNDING LOCATION

<Engine compartment>

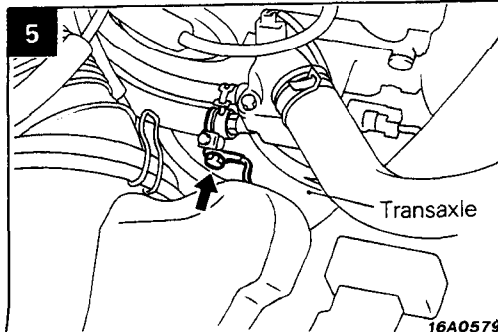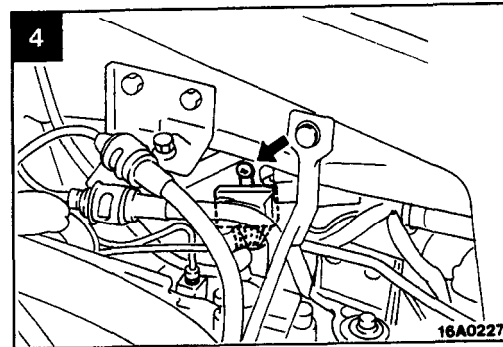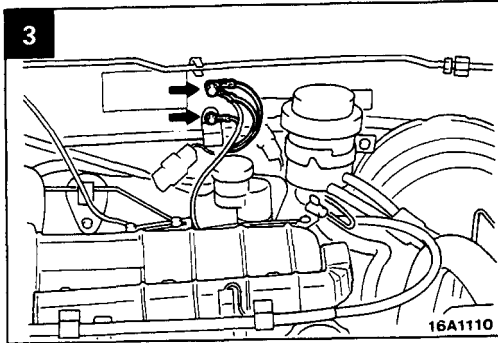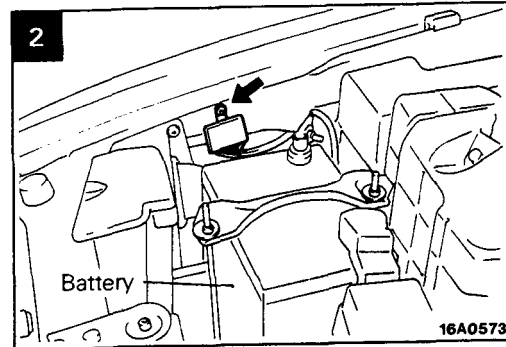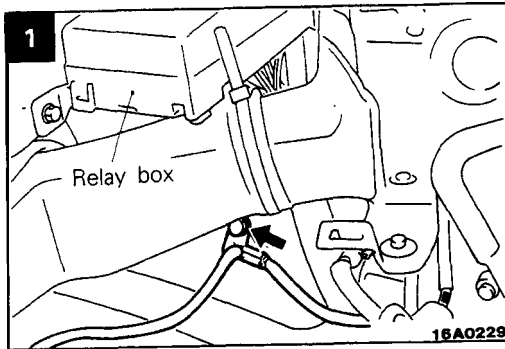
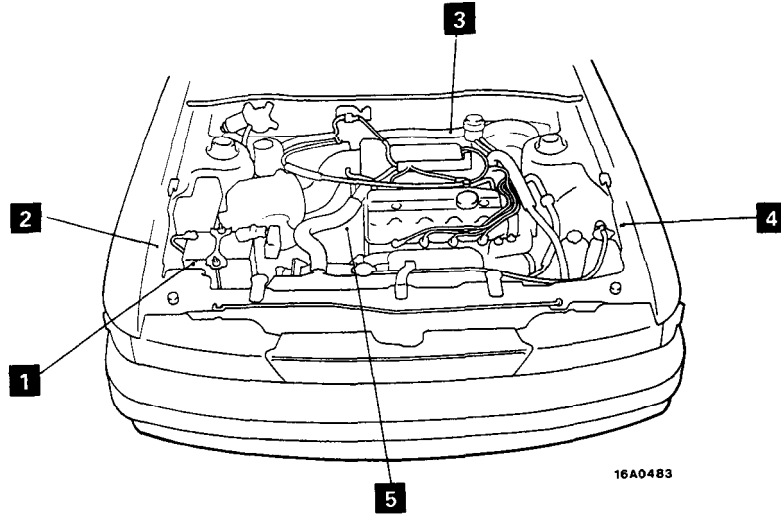


TSB Revision


<Interior>

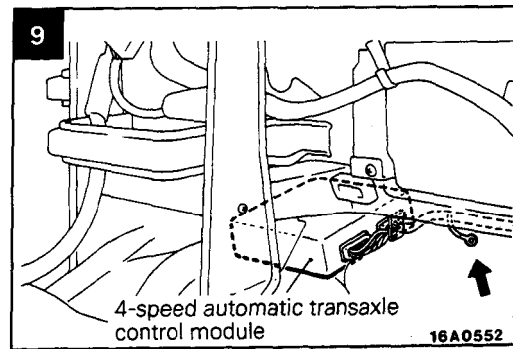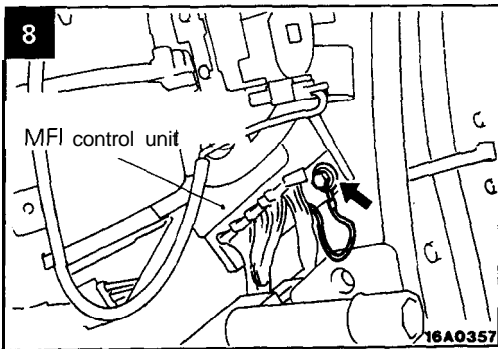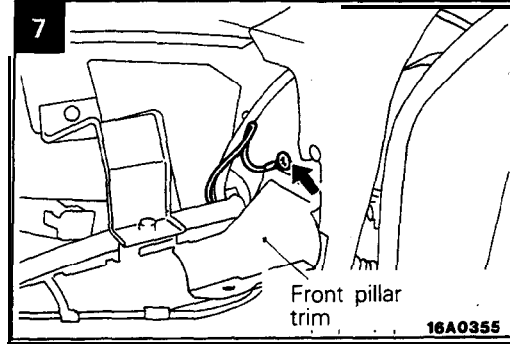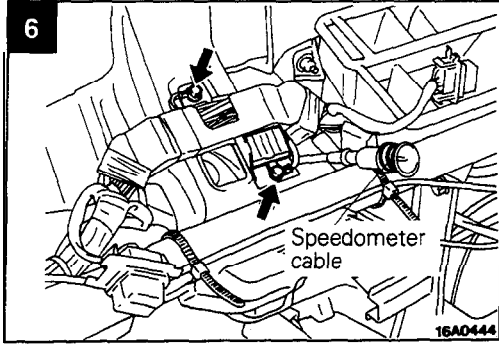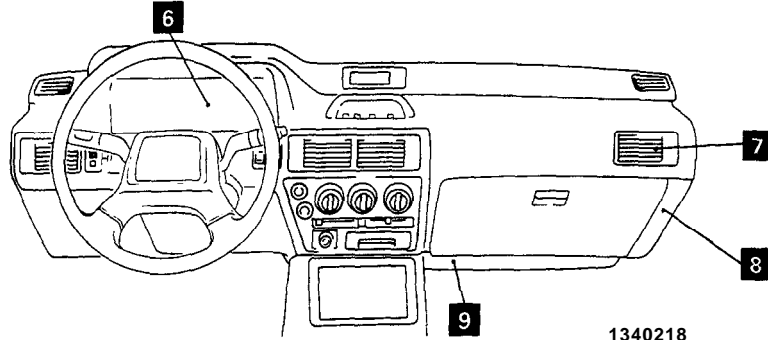


<Floor>

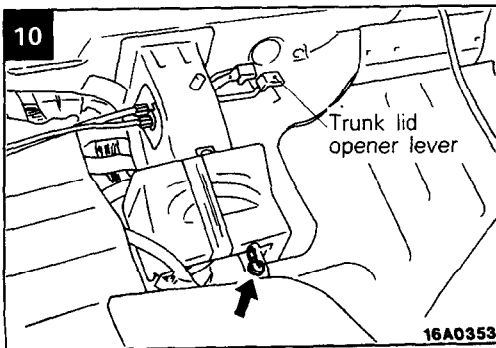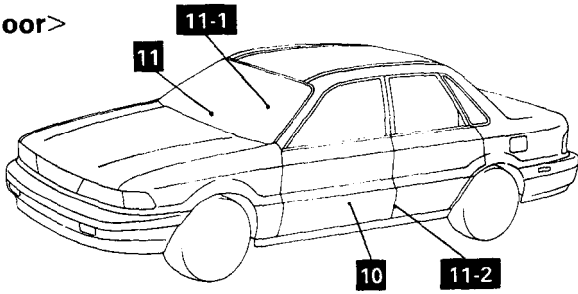


<DOHC-FWD>

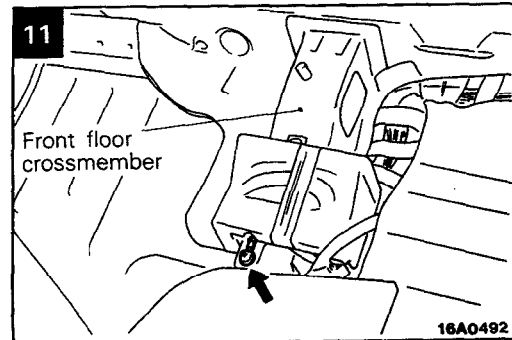


From 1990 models

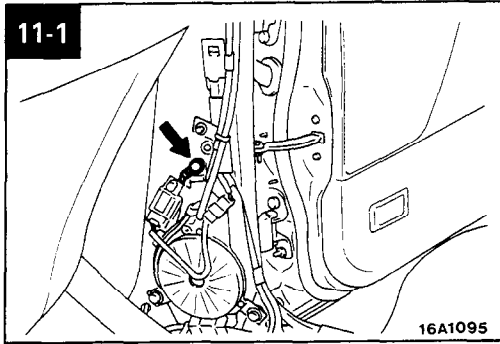



From 1990 models

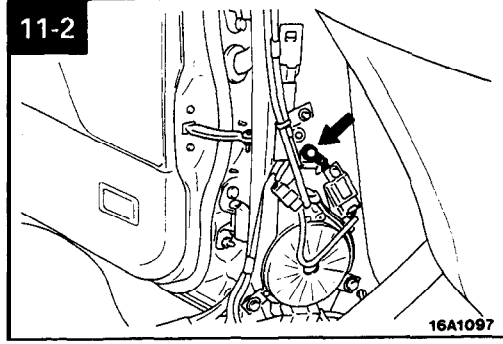


<Luggage compartment>

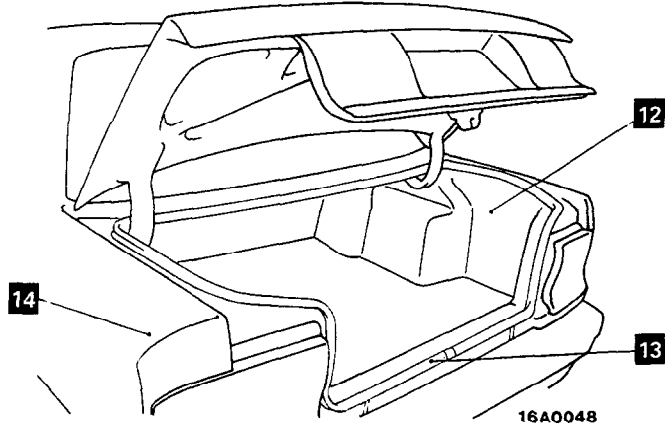

<DOHC-FWD>

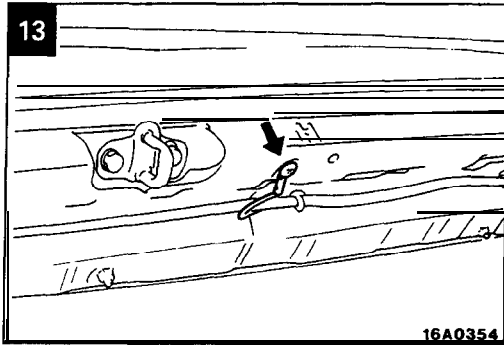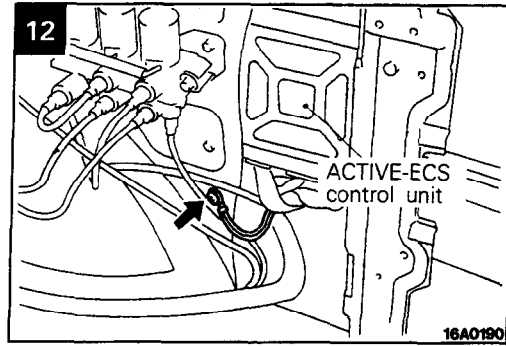

<DOHC>

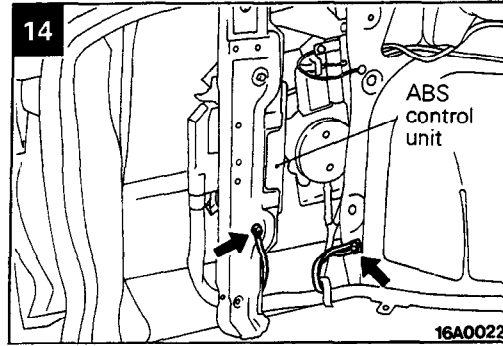


DIODE LOCATION


Name	Symbol	Name	Symbol
Diode (4WS fluid level warning light circuit)	A	Diode (auto-cruise control circuit) <up to 1990 models>	A
Diode (ABS circuit)	B	Diode (sunroof circuit) <From 1991 models>	C
Diode (ACTIVE-ESC circuit)	C	Diode (theft-alarm system circuit)	A,C
Diode (A/T fluid temperature warning light circuit) <AWD-A/T>	A		

NOTE
The "Name" column is arranged in alphabetical order.




<Interior>

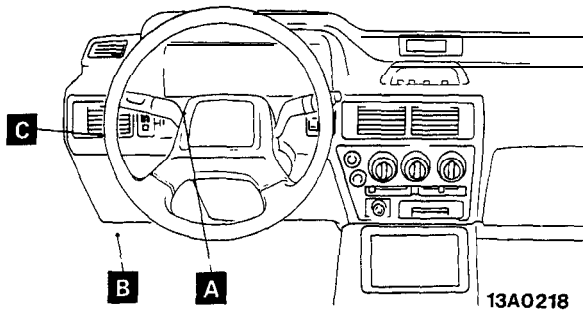

<Up to 1990 models>

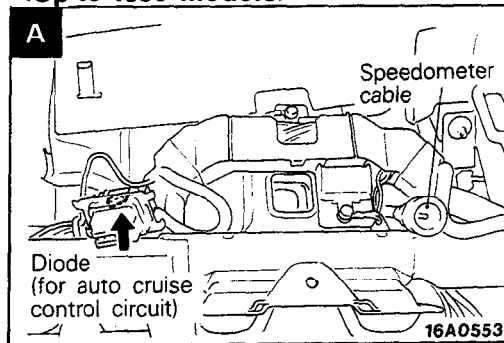


<From 1991 models>

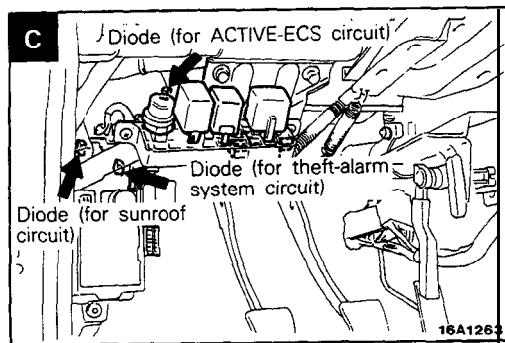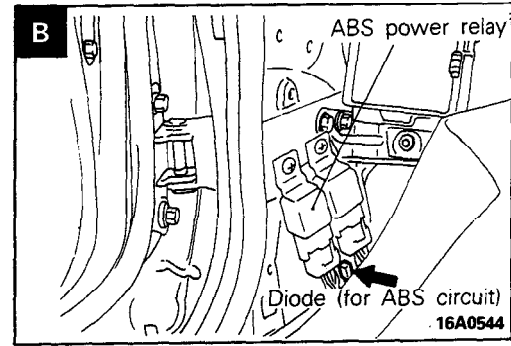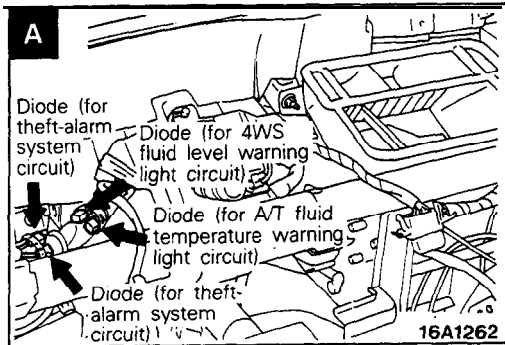

JUNCTION BLOCK


<Up to 1990 models>

M168C-

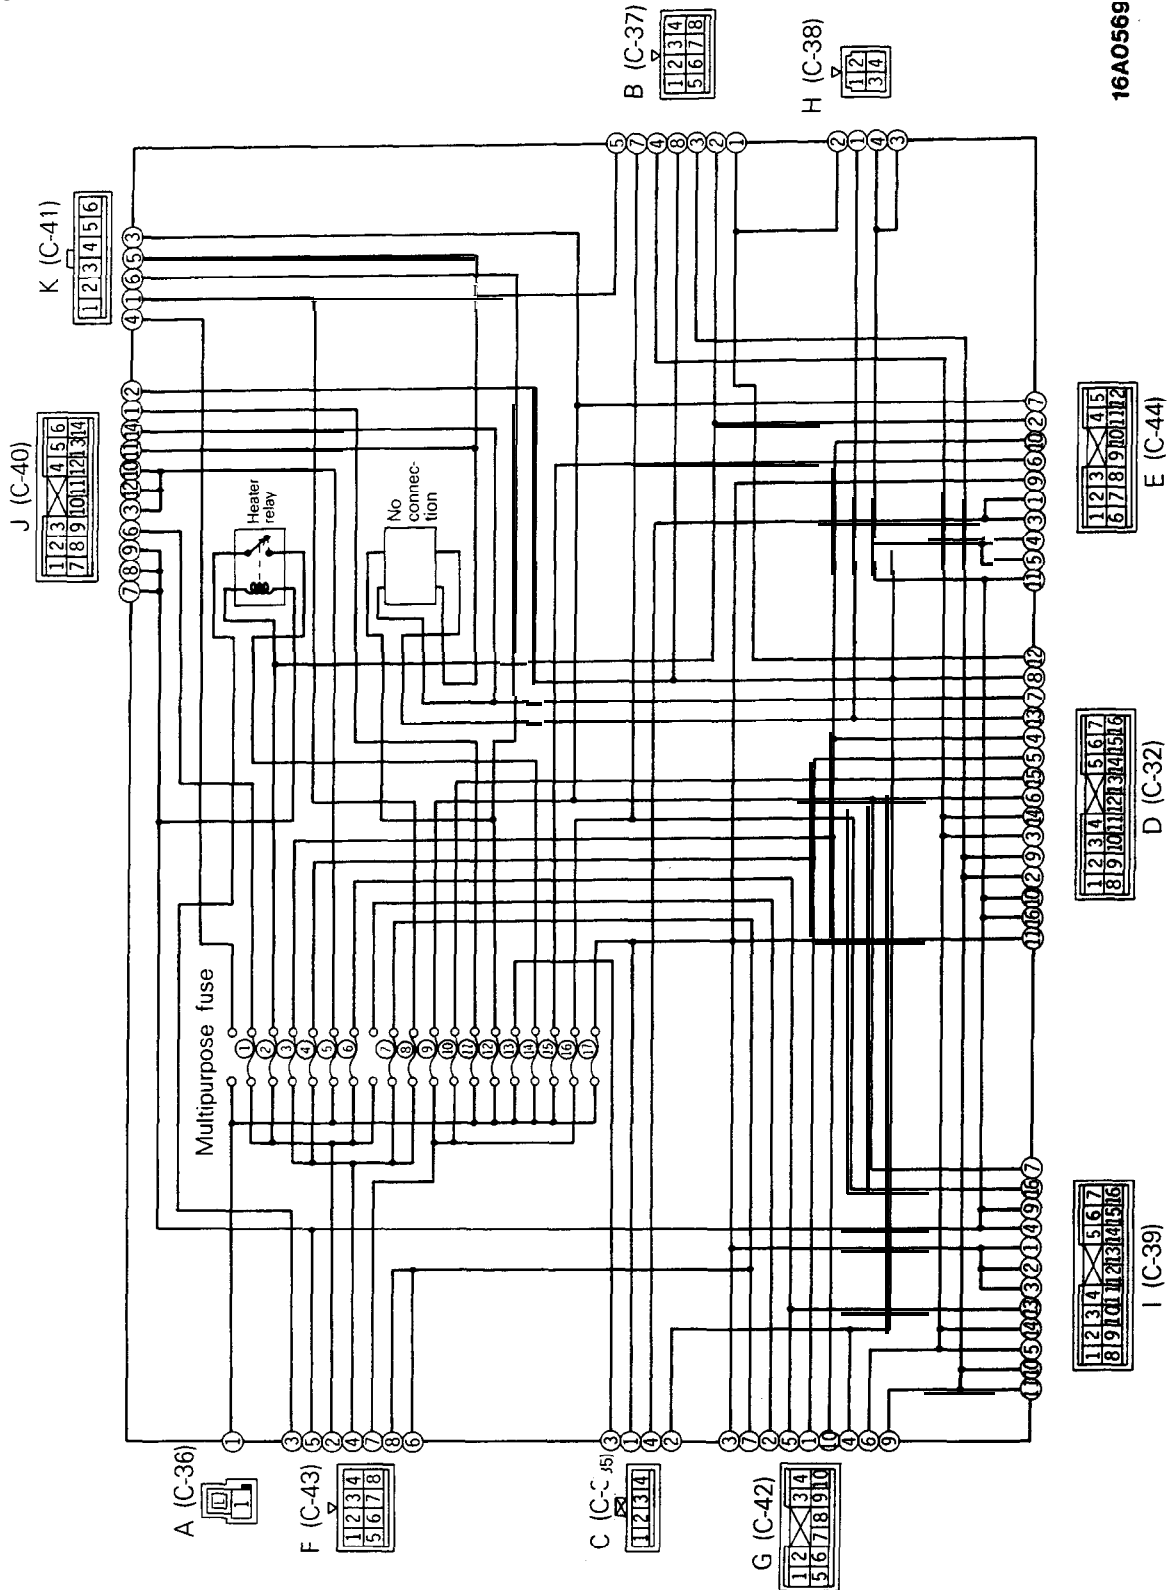


Note

- 1) The alphabetical symbols used for connectors correspond to the alphabetical symbols for connectors on next page.
- 2) The () indicates the connection terminal at the harness side.

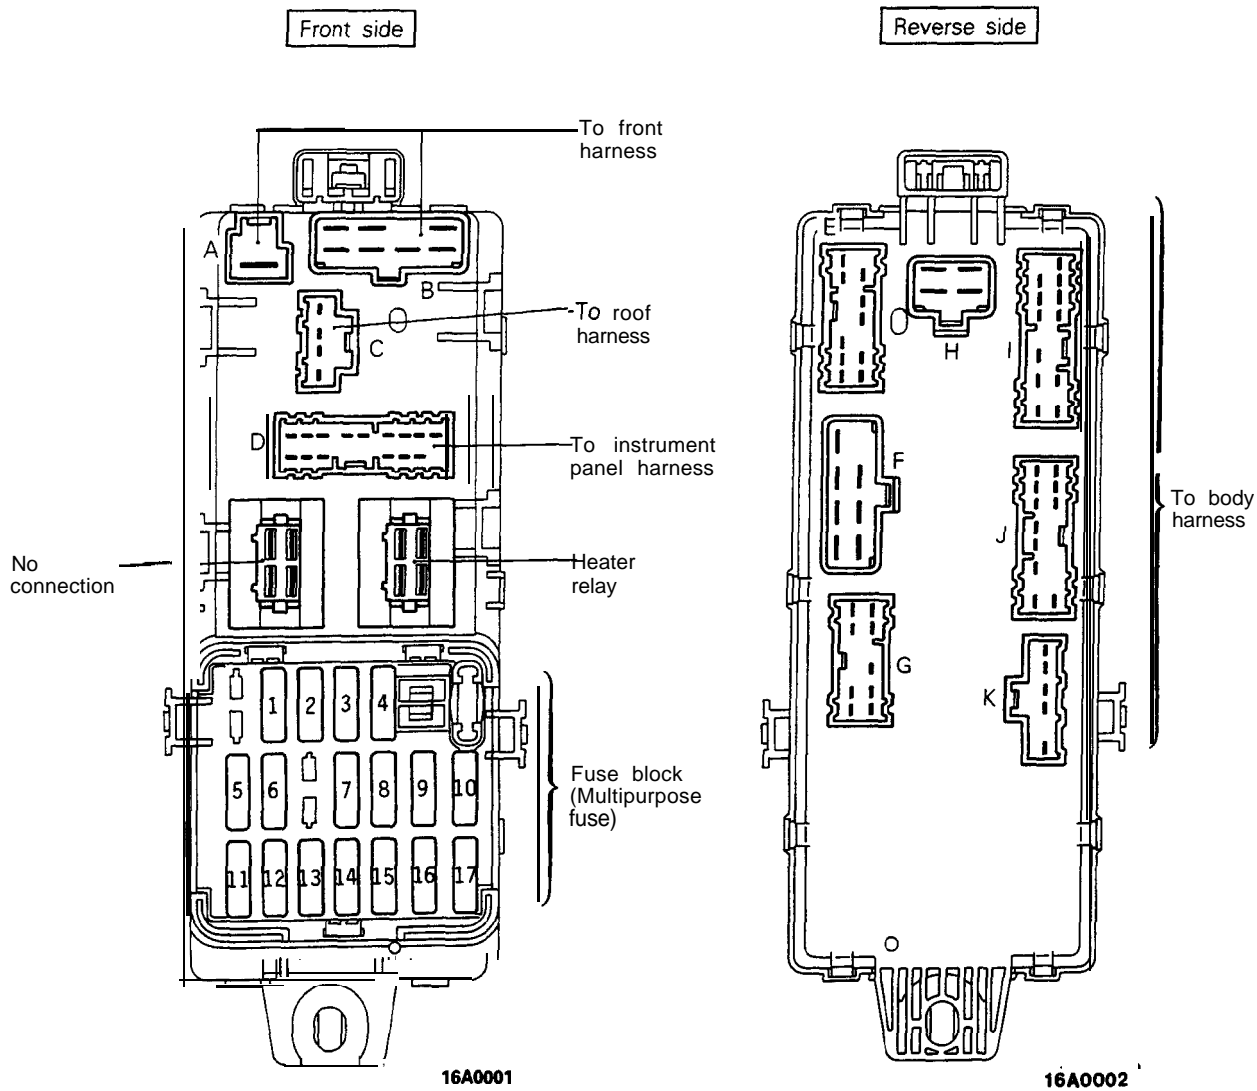

<From 1991 models>

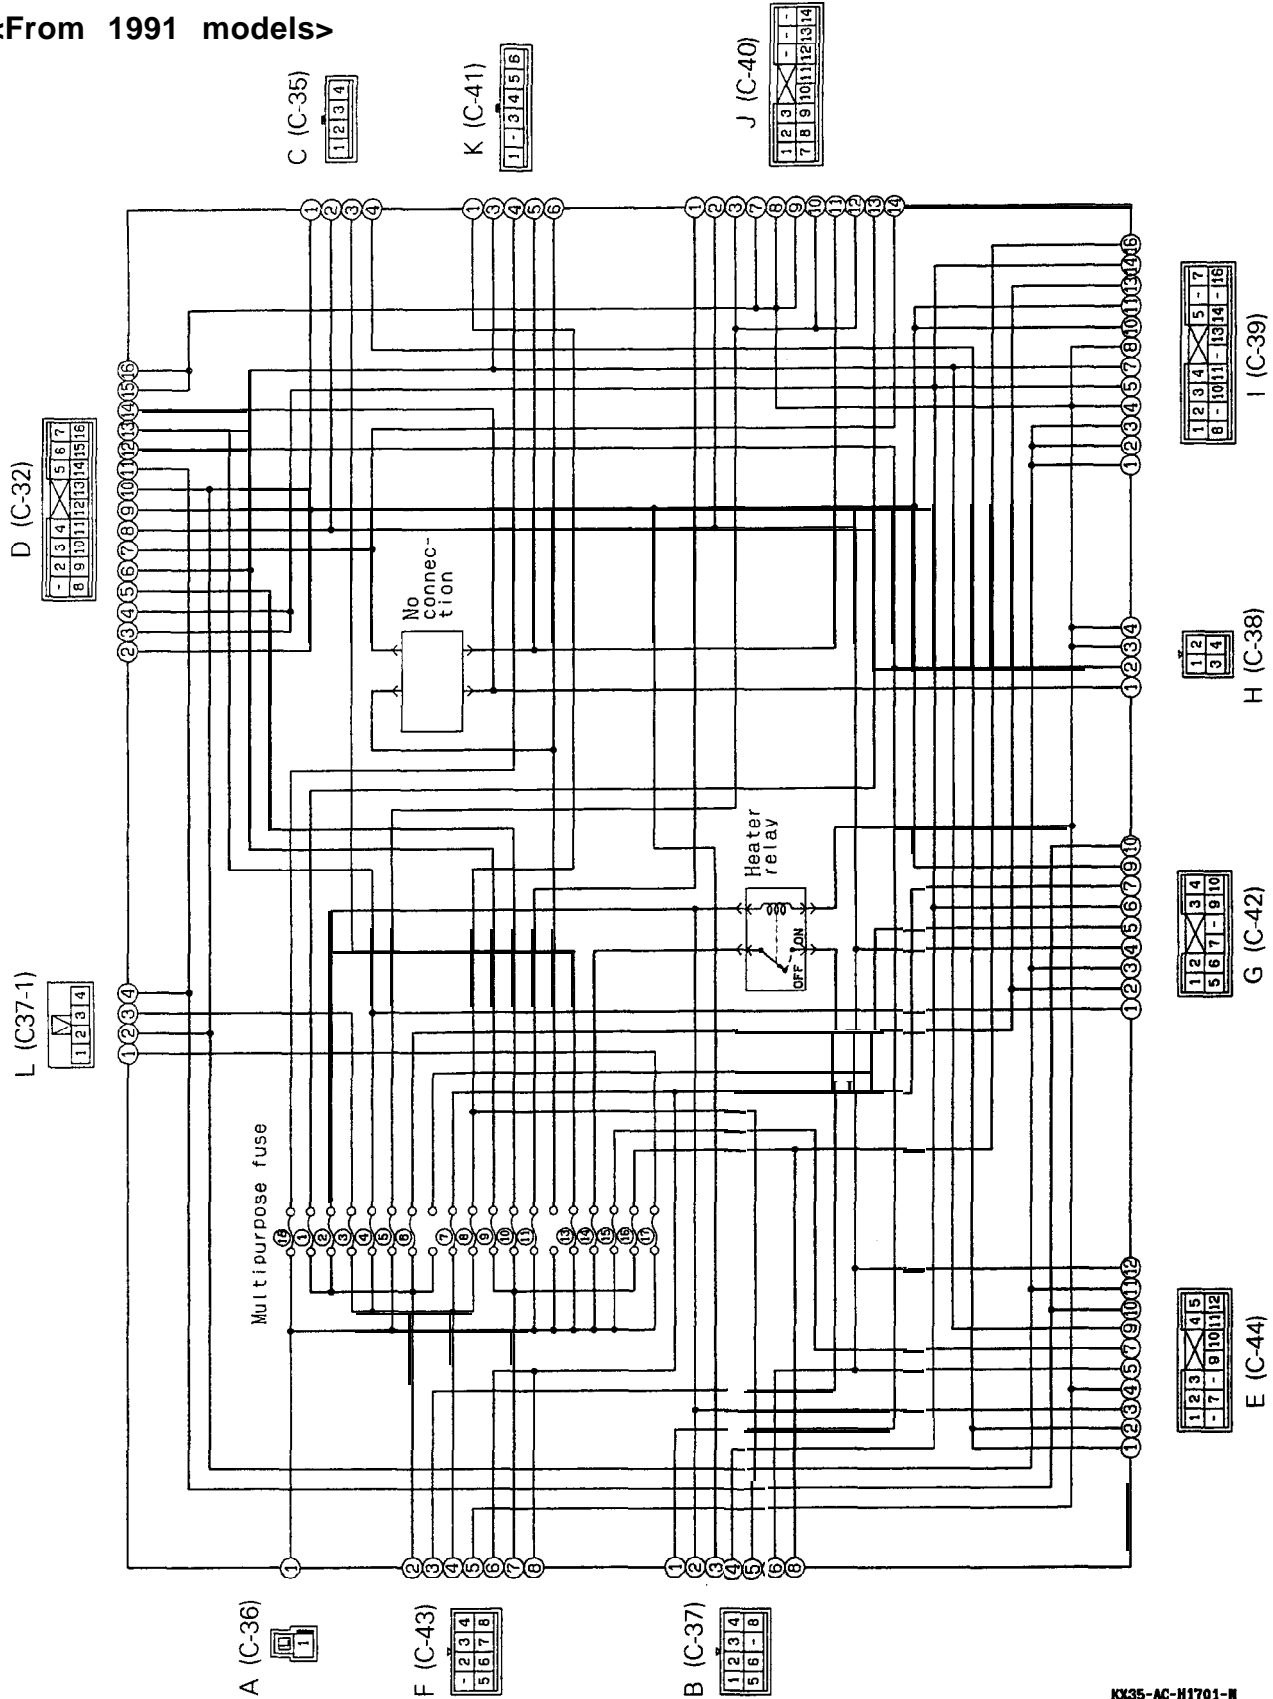

KI35-AC-H1701-N

NOTE

- (1) The alphabetical symbols used for connectors correspond to the alphabetical symbols for connectors on next page.
- (2) The () indicates the connection terminal at the harness side.

TSB Revision