


 




 




 
 



 



 




Fuses and Relays

UCH (645)

Location













This fuse box is located in the passenger compartment on the driver's side.

Table of fuses

| | | | | | | | | | | | | |
|--|--|--|--|--|--|---|---|---|--|--|--|---|
|  20 A |  10 A |  10 A |  20 A |  15 A |  20 A |  15 A |  7,5 A |  15 A |  10 A |  30 A |  5 A |  5 A |
|  15 A |  30 A |  30 A |  10 A |  10 A |  15 A |  7,5 A |  30 A |  30 A |  15 A |  15 A |  10 A | |

SE2048

Allocation of fuses (according to the equipment level)

| No. | Symbol | Amps | Connection | Description |
|-----|---|------|------------|---|
| F1 |  | 20A | 11C | Main beam headlights |
| F2 | ALIM | 10A | BP68 | UCH supply - Card reader - Push button - Electric parking brake |
| F3 |  | 10A | AP40 | Voice synthesiser - Discharge bulb computer - Instrument panel - Heating jets - Headlight adjuster tumbler wheel - Automatic speed limiter control |
| F4 |  | 20A | AP3 | Reversing lights - Heating and ventilation - Parking aid - Alarm + after ignition feed signal - Switch lighting - Rain sensor - Heated windscreen relay - Air conditioning compressor - Wiper motor signal - Autodimming rear-view mirror |
| F5 |  | 15A | (internal) | Timed interior lighting - Seat belt computer |
| F6 | | 20A | AP10 | Brake lights - Wiper stalk - Diagnostic socket - Tyre pressure monitor display - Child locks indicator light - Rear electric lock indicator light - Electric window switch lighting - Cruise control switch |
| F7 |  | 15A | CPG | Left-hand dipped headlight - Discharge bulb computer - Beam adjustment motor |
| F8 |  | 7.5A | 63M-63L | Right-hand side lights |
| F9 |  | 15A | (internal) | Hazard warning lights and indicators |
| F10 |  | 10A | BP2 | Communications system - Radio - Seat relays - Seat memory computer |
| F11 |  | 30A | BP3A | Voice synthesiser - Instrument panel - Front fog lights - Tailgate electric lock - Air conditioning |
| F12 |  | 5A | BP25 | Air bags and pretensioners |
| F13 |  | 5A | AP5 | ABS computer - Electronic braking distribution |
| F14 |  | 15A | 67C | Horn |


Fuses and Relays

| No. | Symbol | Amps | Connection | Description |
|-----|--------|------|------------|--|
| F15 | | 30A | BP48 | Driver's side front electric window - Electric door mirrors - Electric window multiplexing unit |
| F16 | | 30A | SBP3 | Passenger side front electric window - Electric window multiplexing unit |
| F17 | | 10A | 9J | Rear fog lights |
| F18 | | 10A | 40P | Heated door mirrors |
| F19 | | 15A | CPD | Right-hand dipped headlight |
| F20 | | 7.5A | LPG | Left-hand side lights - Dimmed lighting and glove box - Number plate lighting - Rear cigarette lighter and ashtrays lighting - Switch lighting except for doors and hazard warning lights - Parking brake control lighting |
| F21 | | 30A | BP2 | Rear screen wiper |
| F22 | | 30A | BP3 | Central door locking |
| F23 | | 15A | SP4 | Console rear cigarette lighter - Car phone |
| F24 | | 15A | SP7 | Cigarette lighter |
| F25 | | 10A | SP13 | Steering lock - Heated rear screen relay stimulator |

Location

The consumer cut-out fuse is located in the central console, under the covering of the storage armrest.

710

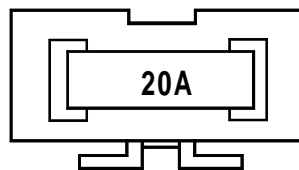

SE2051


| No. | Amps | Description |
|-----|------|--|
| F50 | 20A | Consumer cut-out fuse: Diagnostic socket (225) - Radio (261) - Air conditioning control unit (419) - Seat memory computer (515) - Clock/external temperature/radio display unit (653) - Navigation computer (662) - Tyre pressure computer (851) - Central communication unit (1125) - Alarm connection (R325) - Seat memory (515) |

Fuses and Relays

PASSENGER COMPARTMENT RELAY AND FUSE BOX (1016)

location

This fuse box is located in the passenger compartment above the passenger compartment UCH (645) on the driver's side.

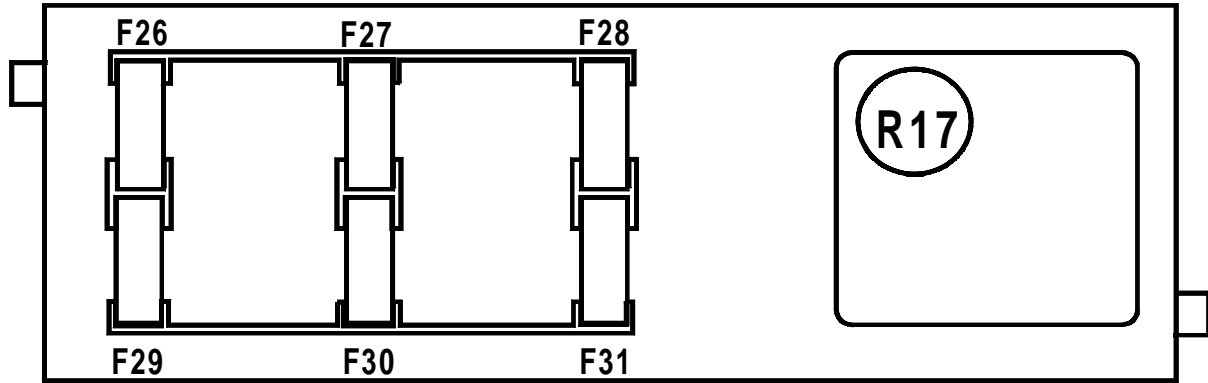

SE2050

Allocation of fuses and relays (according to equipment level)


| No. | Amps | Connection | Description |
|------------|------|------------|--|
| F26 | 30A | BP47 | Fuse: caravan socket |
| F27 | 30A | ABP3 | Fuse: sunroof |
| F28 | 30A | SBP1 | Fuse: rear left-hand electric window (202) |
| F29 | 30A | SBP2 | Fuse: rear right-hand electric window (201) |
| F30 | 5A | AP5A | Fuse: steering wheel angle sensor (583) |
| F31 | -- | -- | Not in use |
| R17 | | | Relay: electric window (703) |

Fuses and Relays

PASSENGER COMPARTMENT RELAY AND FUSE BOX (260)

location

This fuse box is located in the passenger compartment, behind the glove compartment.

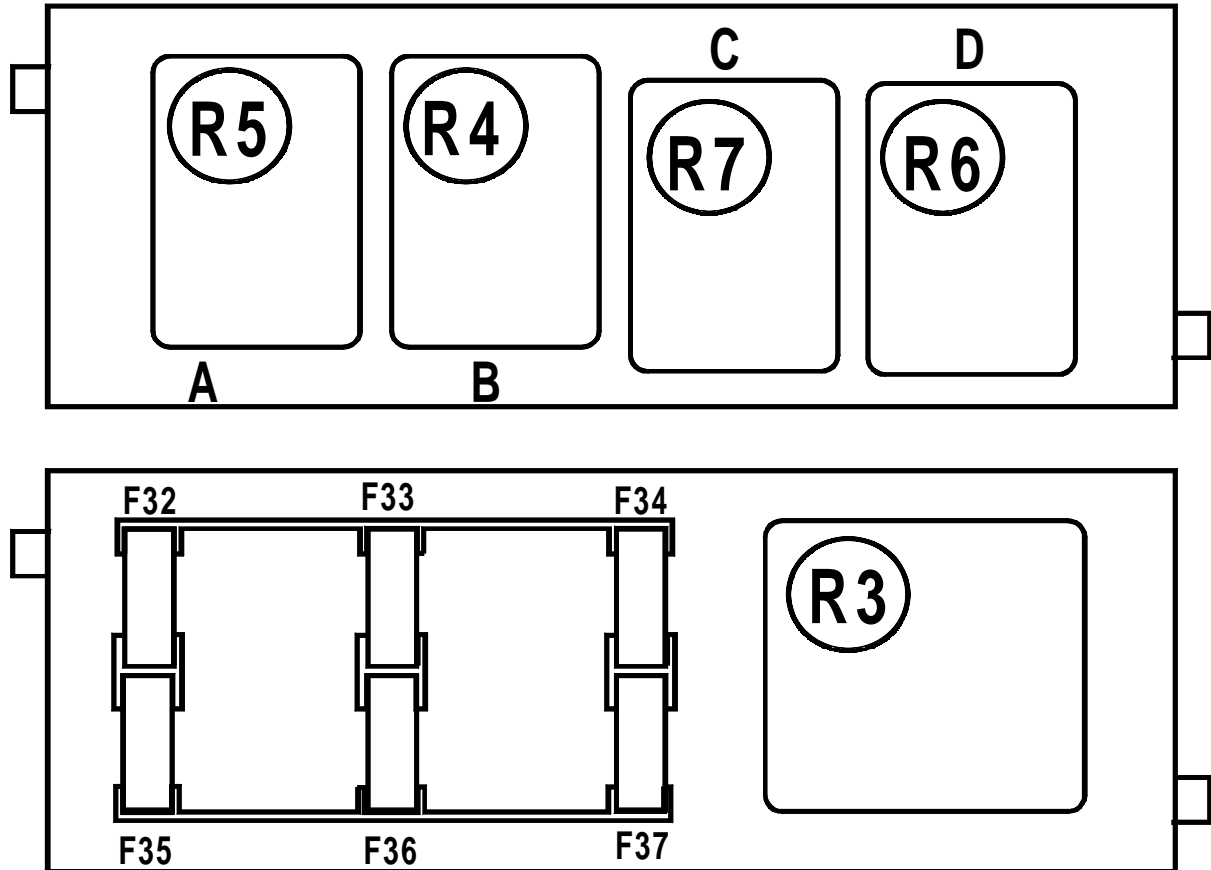

SE2049

Allocation of fuses and relays (according to equipment level)


| No. | Amps | Connection | Description |
|-----|------|------------|--|
| F32 | -- | -- | Not in use |
| F33 | -- | -- | Not in use |
| F34 | 15A | BP24 | Fuse: driver's electric seat supply |
| F35 | 20A | SP8 | Fuse: driver's and passenger's heated seats |
| F36 | 20A | SP11 | Fuse: driver's electric seat |
| F37 | 20A | SP10 | Fuse: passenger's electric seat |
| R3 | | | Relay: seat supply (1399) |
| R4 | | | Relay: daytime running lights monitor (289) |
| R5 | | | Relay: daytime running lights code (290) |
| R6 | | | Relay: headlight washers pump (753) |
| R7 | | | Relay: brake lights cut-off (1281) |

Fuses and Relays

UCH (645)

location

This fuse box is located in the passenger compartment on the driver's side.

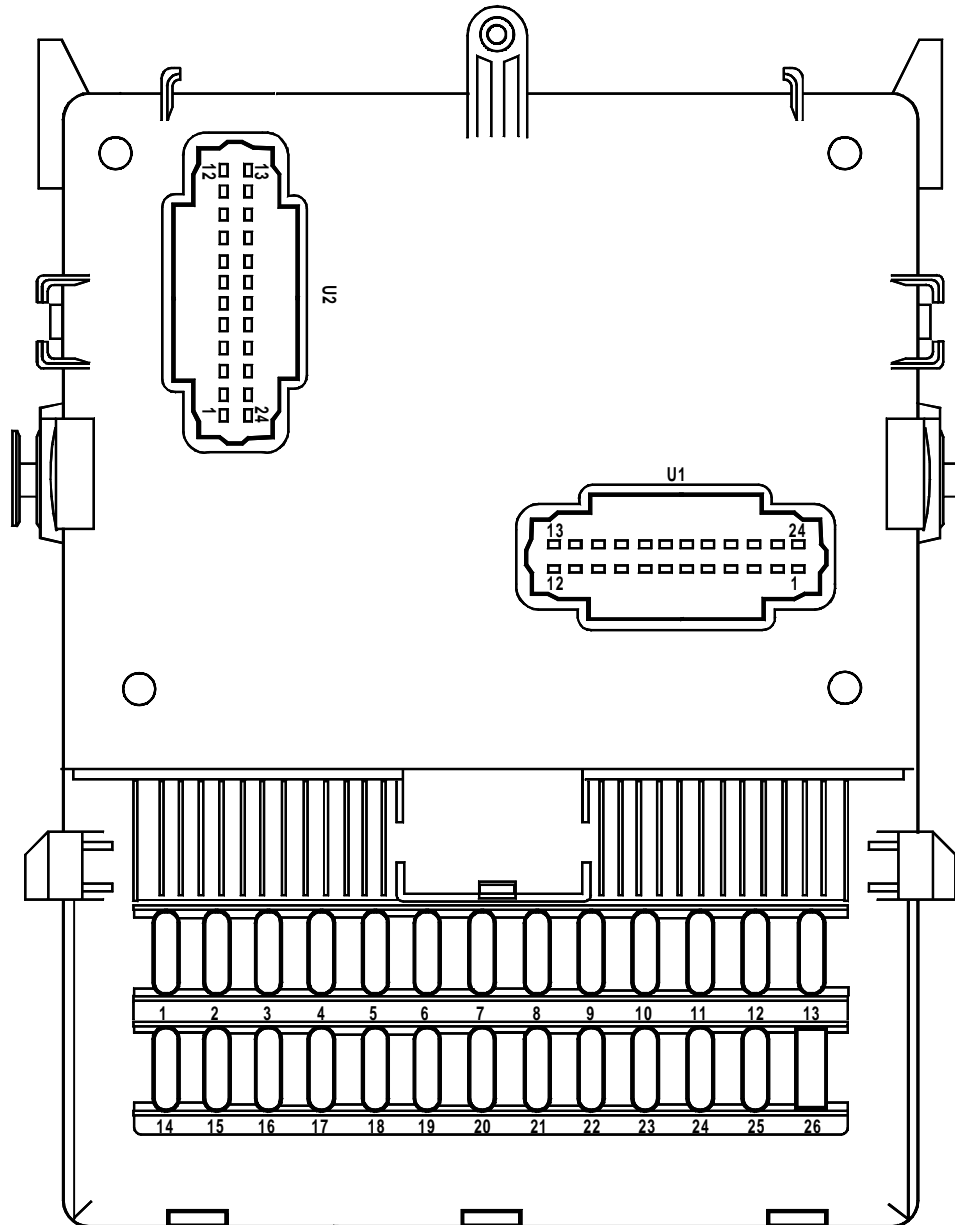

SE2041

Fuses and Relays

Allocation (according to equipment level)

U1 (24-track connector)

| Track | Description |
|-------|--|
| 1 | Central door locking output (interior front) |
| 2 | Central door locking output (interior front and exterior driver's) |
| 3 | Front left-hand side light shunt input |
| 4 | Reserve |
| 5 | Front right-hand side light shunt input |
| 6 | Licence plate lighting shunt input |
| 7 | Right-hand side light fuse failure input |
| 8 | Left-hand side light fuse failure input |
| 9 | Reserve |
| 10 | Dipped headlights input |
| 11 | Rear right-hand side light shunt input |
| 12 | Reserve |
| 13 | Reserve |
| 14 | Electronic relay and fuse box supply input |
| 15 | Reserve |
| 16 | Brake light fuse failure input |
| 17 | Rear left-hand side light shunt input |
| 18 | Reserve |
| 19 | Left-hand brake light shunt input |
| 20 | Central door locking input (interior rear and exterior rear) |
| 21 | Right-hand brake light shunt input |
| 22 | Brake switch input |
| 23 | Central door locking output (exterior driver's and exterior rear) |
| 24 | Central door locking output (interior rear) |

U2 (24-track connector)


| Track | Description |
|-------|---|
| 1 | Rear wiper relay output |
| 2 | Relayed + after ignition feed input (electronic key) |
| 3 | Relayed idle + after ignition feed input (electronic key) |
| 4 | Relayed + after ignition feed output (electronic key) |
| 5 | Central door locking supply input |
| 6 | Reserve |
| 7 | Reserve |
| 8 | Central door locking relay output - opening |
| 9 | Relay plate 2 output |
| 10 | Central door locking relay output - closing |
| 11 | Relay plate 1 output |
| 12 | Passenger compartment computer diagnostic warning light input |
| 13 | Electronic earth |
| 14 | Reserve |
| 15 | Left-hand indicator control output |
| 16 | Diagnostic indicator input (status of bulb filaments) |
| 17 | Right-hand indicator control output |
| 18 | Reserve |
| 19 | Indicator supply input |
| 20 | Main beam headlights relay output |
| 21 | Starter immobiliser relay output |
| 22 | Side lights input |
| 23 | Timed supply relay output |
| 24 | UCH supply input |

Fuses and Relays

UCH (645)

location

This fuse box is located in the passenger compartment on the driver's side.

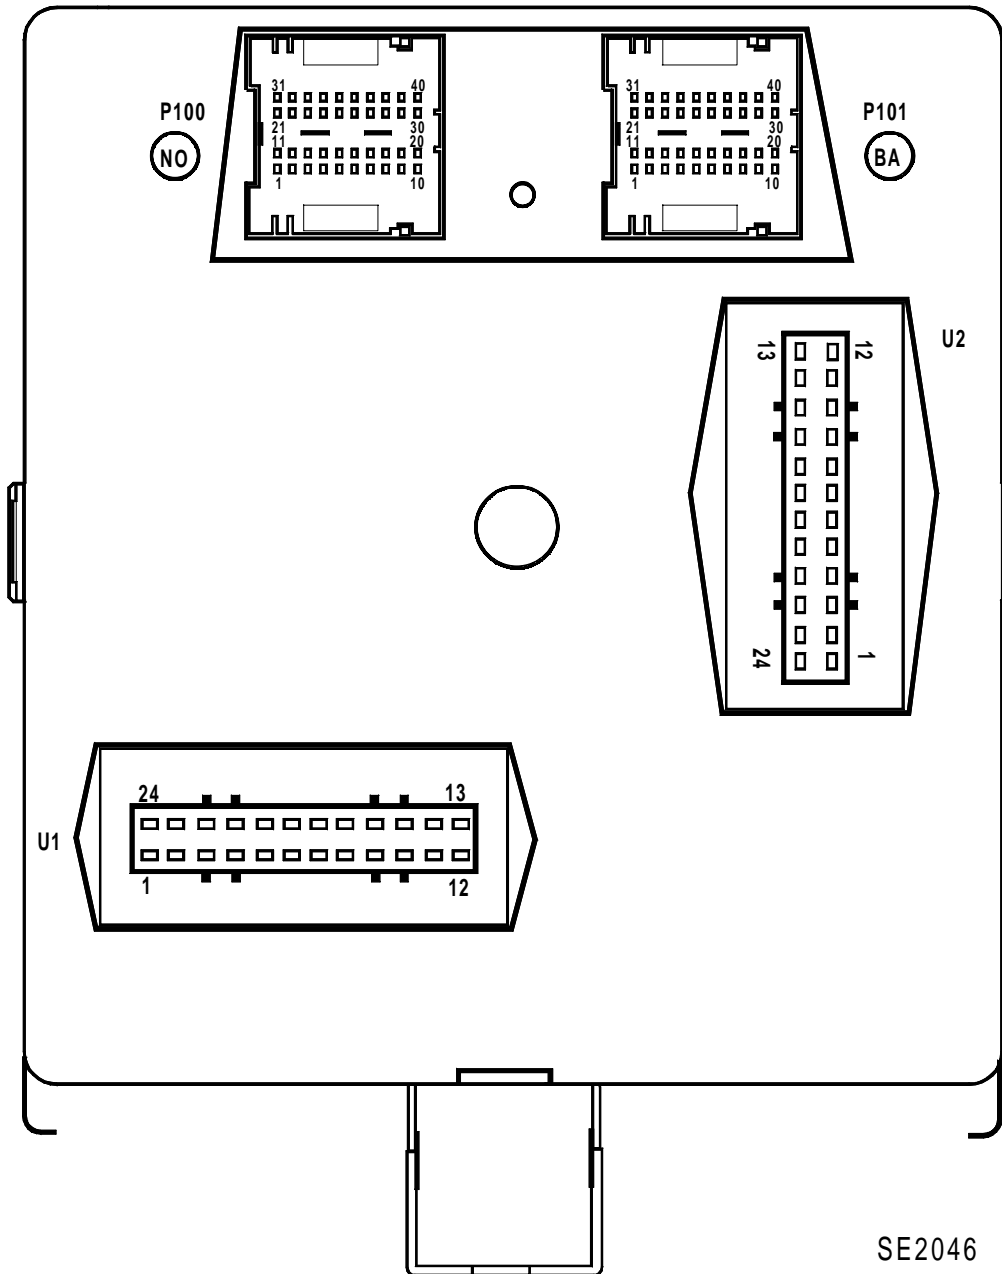

Fuses and Relays

Allocation (according to the equipment level)

P100 (40-track connector) **BLACK**

| BROWN | |
|--------------|---|
| Track | Description |
| 1 | Card fully inserted + signal (1082) |
| 2 | Central timed flasher control (125) |
| 3 | Engine running indicator light control (1087) |
| 4 | Rear electric window function locking relay coil control (135) |
| 5 | Windscreen wiper high speed control (145) |
| 6 | Card reader DATA transmission (1082) |
| 7 | Manual gearbox neutral + signal (1109) |
| 8 | Reversing lights + control (172-173-1109) |
| 9 | Central door locking closing timer + control (123) |
| 10 | Windscreen wipers timed low speed control (145) |
| 11 | OK to start light control (1087) |
| 12 | Not in use |
| 13 | Diagnostic K signal (225) |
| 14 | External temperature display output signal (653-1125) |
| 15 | Windscreen wiper low speed control (145) |
| 16 | Boot lighting control (165) |
| 17 | Central door locking opening timer + control (123) |
| 18 | Tyre deflation radio frequency transmission signal (851) |
| 19 | UCH DATA transmission (1082) |
| 20 | Engine on off button + signal (1087) |
| GREEN | |
| Track | Description |
| 21 | Door locking LED (123) |
| 22 | Sunroof electric windows anti-pinch serial line signal (201-202-203-204-304-1122) |
| 23 | Rain sensor (212-1415) |
| 24 | Rear wiper timer + control (145) |
| 25 | Rear screen washer pump + control (145-677) |
| 26 | Clutch - signal (675) |
| 27 | Passenger compartment fan unit relay control (419) |
| 28 | Driver's handle infrared sensor signal (1084) |
| 29 | Rear right-hand handle infrared sensor signal (1085) |
| 30 | Air conditioning CAN H signal (419) |
| 31 | Interior lighting - control (1118-1119) |
| 32 | Main beam headlights + input (249) |
| 33 | Passenger's handle infrared sensor signal (1083) |
| 34 | Reserve |
| 35 | Windscreen washer pump + control (145-677) |
| 36 | Right-hand indicator timer operating control (209) |
| 37 | Left-hand indicator timer operating control (209) |
| 38 | Rear wiper park position switch - signal (211) |
| 39 | Reserve |
| 40 | Air conditioning CAN L signal (419) |

Fuses and Relays

Allocation (according to equipment level)

P101 (40-track connector) **WHITE**


| BROWN | |
|--------------|---|
| Track | Description |
| 1 | CAN L signal (225) |
| 2 | Variable power assisted steering motor D control (540) |
| 3 | Variable power assisted steering motor C control (540) |
| 4 | Rear right-hand door deadlocking - signal (138) |
| 5 | Door handle infrared sensor + (1083) |
| 6 | Not in use |
| 7 | Rear right-hand first notch switch - signal (138-525) |
| 8 | Tailgate opening motor authorised supply (138-557) |
| 9 | Electric steering column lock control (1088) |
| 10 | Not in use |
| 11 | CAN H signal (225) |
| 12 | Card presence + signal (1082-1088) |
| 13 | Variable power assisted steering motor phase B control (540) |
| 14 | Software lock - control (247) |
| 15 | Rear left-hand first notch switch - signal (139-526) |
| 16 | Driver's first notch switch - signal (523) |
| 17 | Right-hand indicator repeater control (267) |
| 18 | Variable power assisted steering motor phase A control (540) |
| 19 | Left-hand indicator repeater control (268) |
| 20 | Passenger's first notch switch - signal (141-524) |
| GREEN | |
| Track | Description |
| 21 | Rear left-hand door deadlocking - signal (139) |
| 22 | Horn + control (1184) |
| 23 | Rear left-hand handle infrared sensor signal (1086) |
| 24 | Child safety LED - control (135) |
| 25 | Tailgate striker (1151) |
| 26 | Not in use |
| 27 | Not in use |
| 28 | Not in use |
| 29 | Lights relay control for daytime running lights (289) |
| 30 | Dipped beam relay control for daytime running lights (290) |
| 31 | Not in use |
| 32 | Seat memory serial line control and passenger door MUX computer (515-1123) |
| 33 | Not in use |
| 34 | Tailgate striker (1151) |
| 35 | Not in use |
| 36 | Memory control (515-1123) |
| 37 | Not in use |
| 38 | Not in use |
| 39 | Not in use |
| 40 | Headlight washer coil - control (219-753) |

Fuses and Relays

UCH (645)

location

This fuse box is located in the passenger compartment on the driver's side.

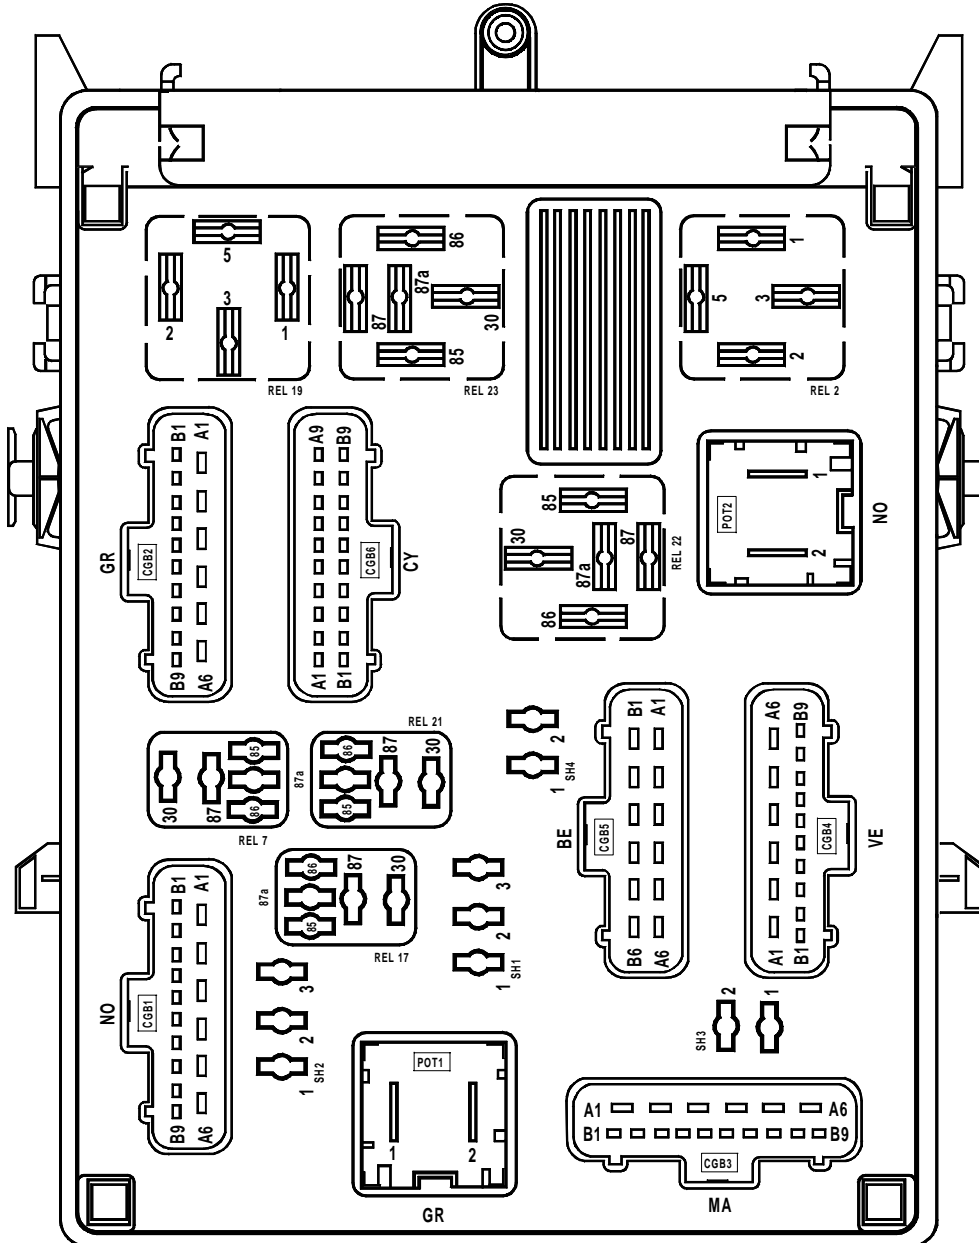

SE2042

Fuses and Relays

Allocation (according to equipment level)

CGB1 (15-track connector) **BLACK**

| WHITE | | |
|--------------|-------------------|--|
| Track | Connection | Description |
| A1 | -- | Not in use |
| A2 | 8B | Front fog lights + (176-177-247) |
| A3 | 8A | Front fog lights relay + through stalk (209) |
| A4 | SP3B | Passenger compartment fan assembly relay 2 + accessories feed (1429) |
| A5 | -- | Not in use |
| A6 | BP79 | Passenger compartment protected + battery feed 1 (1016) (caravan connection) |
| BLACK | | |
| B1 | BP3A | Protected + battery feed (247-363-419-1151) |
| B2 | AP5 | ABS/ESP protected + after ignition feed (1094) |
| B3 | AP25 | Air bag protected + after ignition feed (756) |
| B4 | -- | Not in use |
| B5 | SP13 | Protected + accessories feed (1088) |
| B6 | -- | Not in use |
| B7 | SP2 | Protected + accessories feed (260-261-653-1016-1125-1222-1273-1399) |
| B8 | SP7 | Protected + accessories feed (101) |
| B9 | SP4 | Protected + accessories feed (506-330) |

CGB2 (15-track connector) **GREY**

| WHITE | | |
|--------------|-------------------|---|
| Track | Connection | Description |
| A1 | BP1 | Protected + battery feed input (597) |
| A2 | BP1 | Protected + battery feed input (597) |
| A3 | SP3 | Protected + accessories feed (419) |
| A4 | 20D | Central door locking closure + control |
| A5 | 20C | Central door locking opening + control |
| A6 | M | MB earth |
| BLACK | | |
| B1 | M | NC electronic earth |
| B2 | 20AK | Rear door external internal unlocking control (138-139) |
| B3 | 20AM | Driver's rear external locking control (138-139-140) |
| B4 | 20AL | Rear internal locking control (138-139) |
| B5 | 20AP | Front internal locking control (140-141) |
| B6 | 20AN | Driver's front internal external unlocking control (140-141) |
| B7 | LPG | Parking lights + feed (101-168-184-185-227-241-247-261-419-541-562-653-1003-1081-1106-1125) |
| B8 | -- | Not in use |
| B9 | 13AG | Boot lighting timer + control (165-523-524) |

Fuses and Relays

Allocation (according to equipment level)

CGB3 (15-track connector) **BROWN**

| WHITE | | |
|-------|------------|--|
| Track | Connection | Description |
| A1 | C | Dipped headlights + (209) |
| A2 | -- | Not in use |
| A3 | -- | Not in use |
| A4 | -- | Not in use |
| A5 | 67C | Horn fuse + control (209) |
| A6 | 9J | Rear fog light fuse + control (209) |
| BLACK | | |
| B1 | CPD | Right-hand dipped headlight + (226) |
| B2 | CPG | Left-hand dipped headlights + (227-247-989) |
| B3 | 40P | Door mirror de-icing fuse protected + control(239-240) |
| B4 | 9P | Protected rear fog lights + control (172-173-247-1284-1285) |
| B5 | -- | Not in use |
| B6 | SBP3 | Passenger/driver's electric window battery protected + accessories feed (133-1123) |
| B7 | 13B | Interior lighting - control (523) |
| B8 | BP48 | Door mirrors and driver's electric window protected + battery feed (203-1122) |
| B9 | 67A | Horn + control (105-1184) |

CGB4 (15-track connector) **GREEN**

| WHITE | | |
|-------|-----------------|--|
| Track | Connection | Description |
| A1 | -- | Not in use |
| A2 | 23 ^E | Rear function locking relay coil control (135) |
| A3 | ABP5 | Rear electric window battery or after ignition feed (1016) |
| A4 | 23EA | Rear electric window relay control (1016) |
| A5 | -- | Not in use |
| A6 | 15B | Heated rear screen + control (200) |
| BLACK | | |
| B1 | BP68 | Reception/transmission unit fuse protected + battery feed (1082-1087-1216) |
| B2 | -- | Not in use |
| B3 | AP40 | Accessories fuse protected + after ignition feed (247-363-537-538-562-694-695-989) |
| B4 | 36A | Rear wiper + control (211) |
| B5 | -- | Not in use |
| B6 | 13AD | Footwell, courtesy mirrors and interior lights timer + control |
| B7 | 63L | Rear right-hand side light feed + control (172) |
| B8 | 63M | Front right-hand side light feed + control (226) |
| B9 | 15M | Heated rear screen relay - control (419) |

Fuses and Relays

CGB5 (12-track connector) **BLUE**

| WHITE | | |
|--------------|-------------------|---|
| Track | Connection | Description |
| A1 | BP13 | Protected + battery feed by passenger compartment 3 (597) |
| A2 | -- | Not in use |
| A3 | A | + after ignition feed (597-1016) |
| A4 | BP3 | Central door locking protected + battery feed (123) |
| A5 | -- | Not in use |
| A6 | BP80 | Protected + battery feed by passenger compartment 2 (260-515) |
| BLACK | | |
| B1 | M | MB earth |
| B2 | L | + side light (209) |
| B3 | D | + starting (163) and automatic transmission signal (779) |
| B4 | 78P | Lights relay control for daytime running lights (289) |
| B5 | -- | Not in use |
| B6 | 78Q | Dipped beam relay control for daytime running lights (290) |

CGB6 (18-track connector) **CLEAR**


| WHITE | | |
|-----------------|-------------------|--|
| Track | Connection | Description |
| A1 | -- | Not in use |
| A2 | AP3 | Heated rear screen control fuse protected + after ignition feed (123-212-419-442-612-1109-1124-1222-1429) |
| A3 | AP3 | Heated rear screen control fuse protected + after ignition feed (123-212-419-442-612-1109-1124-1222-1429) |
| A4 | -- | Not in use |
| A5 | -- | Not in use |
| A6 | -- | Not in use |
| A7 | 64B | Hazard warning lights control + control (125) |
| A8 | 64C | Left-hand indicators control (173-247-256) |
| A9 | 64D | Right-hand indicators control (172-247-255) |
| 14KBLACK | | |
| B1 | 11A | Main beam headlight + (226-227-247) |
| B2 | -- | Not in use |
| B3 | AP10 | Brake lights fuse protected + after ignition feed (123-129-130-131-133-145-160-225-771-851-1081-1110-1168-1170-1281) |
| B4 | 63Q | Licence plate lighting + control (166-167) |
| B5 | 63K | Rear left-hand side light feed + control (173) |
| B6 | 63N | Front left-hand side light feed + control (227) |
| B7 | 65A | Brake lights control (160-1281) |
| B8 | 65B | Right-hand brake light + control (172) |
| B9 | 65C | Left-hand brake light + control (173) |

Fuses and Relays

UCH (645)

location

This fuse box is located in the passenger compartment on the driver's side.

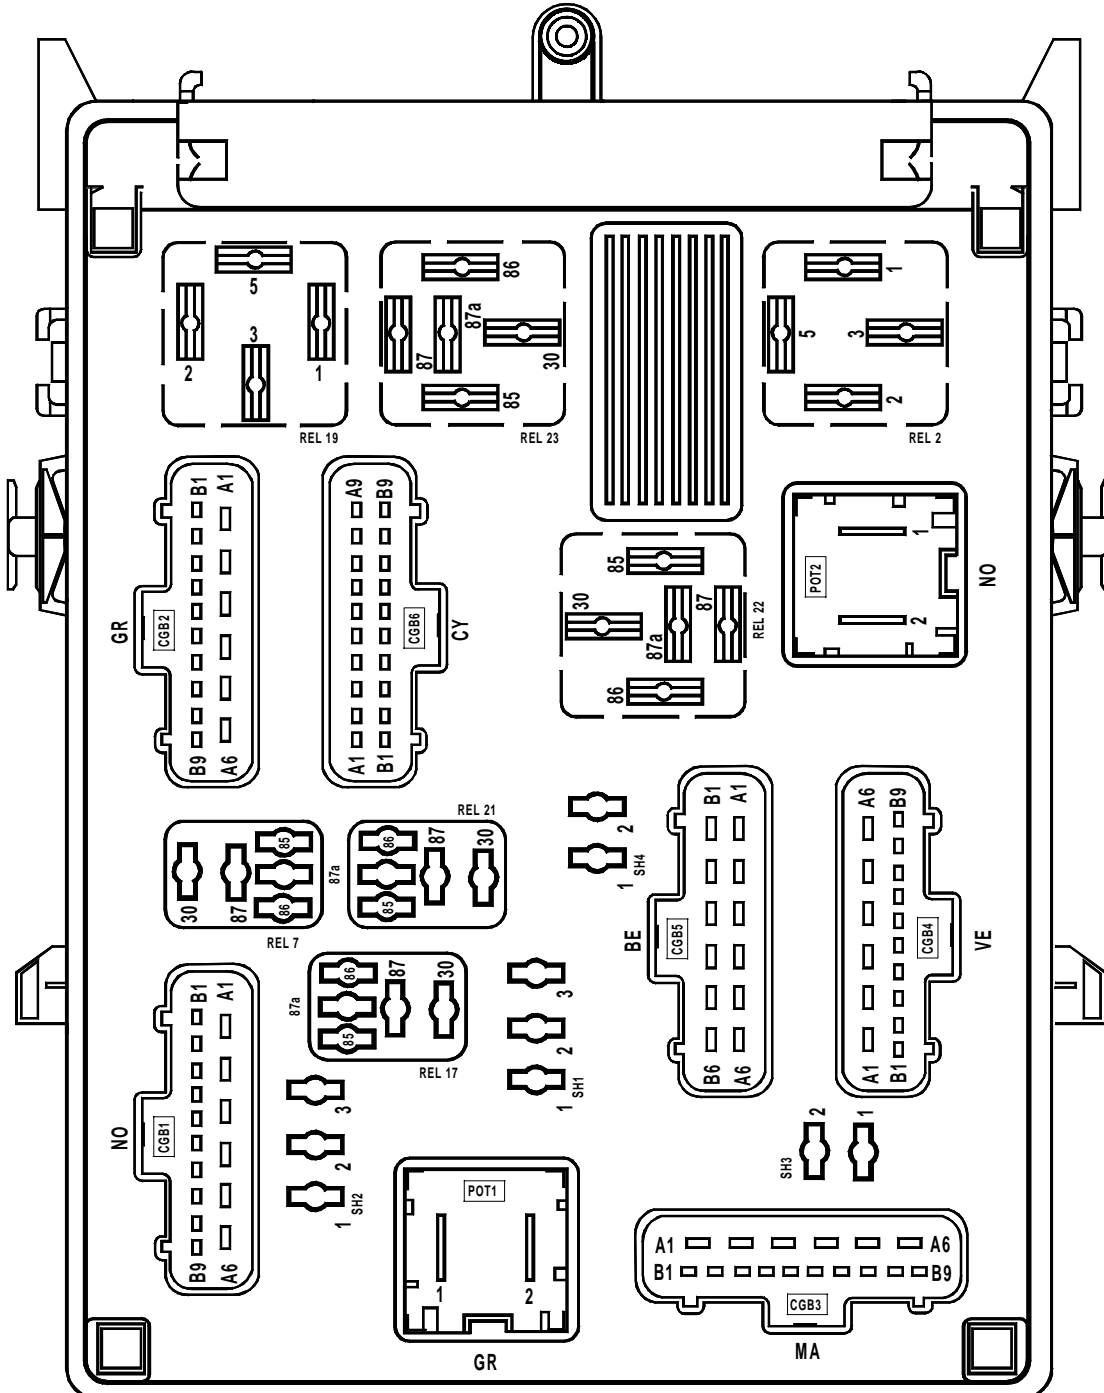

SE2042

Fuses and Relays


Allocation (according to equipment level)

| Track | Description |
|--------|---|
| REL 2 | Relay: heated rear screen (235) |
| REL 7 | Relay: front fog lights (231) |
| REL 9 | Relay: windscreen wiper |
| REL 10 | Relay: windscreen wiper |
| REL 11 | Relay: rear wiper through reversing lights (1041) |
| REL 12 | Relay: central locking |
| REL 13 | Relay: central locking |
| REL 18 | Relay: timed interior lighting |
| REL 19 | Relay: accessories feed (1155) |
| REL 21 | Relay: starter inhibition (232) |
| REL 22 | Relay: computer/+ after ignition feed (853) |
| REL 23 | Relay: accessories, after-sales fitted radio/rear electric windows (720) |
| SH 1 | Shunt: rear electric windows |
| SH 2 | Shunt: front electric windows |
| SH 3 | Shunt: daytime running lights (dipped beam headlights) |
| SH 4 | Shunt: daytime running lights (side lights) |

Fuses and Relays

ENGINE AND RELAY FUSE BOX (597)

Fusebox and relays (engine side)

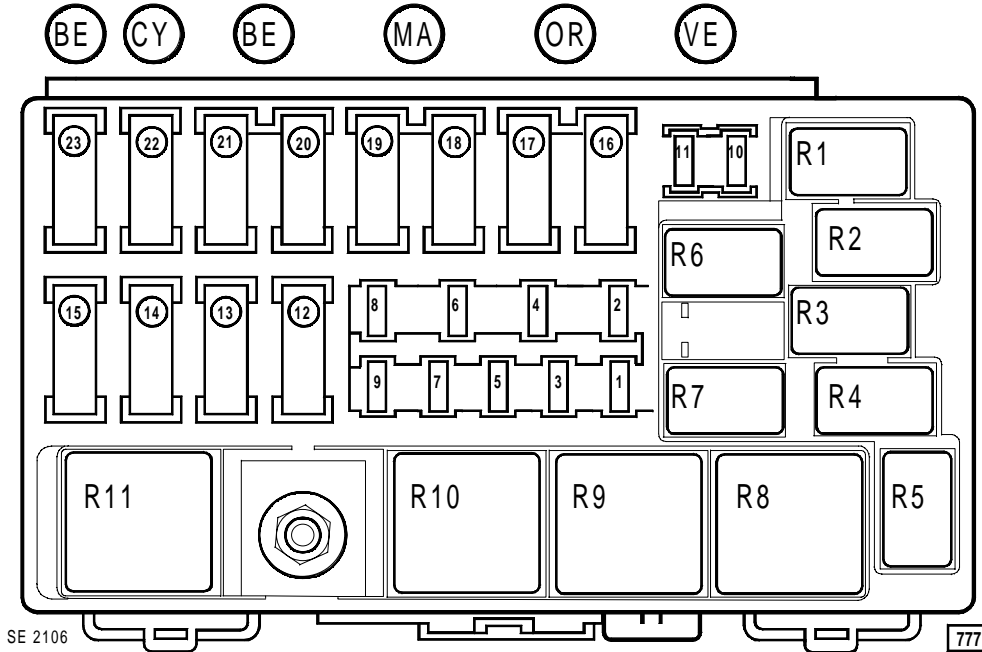


Allocation of fuses (depending on equipment level)

| No. | Amps | Connection | Description |
|------|--------|------------|---|
| FM1 | 7.5A | BP42 | Fuse: automatic gearbox (119) |
| FM2 | 10A | AP15 | Fuse: additional heater - Diesel heater control relay (449 -745) |
| FM3 | 30A | BP37 | Fuse: injection relay (236 - 983) |
| FM4 | 5A-15A | AP4 | Fuse: automatic transmission (119) (DPO 5A or SU1 15A) |
| FM5 | 30A | BP27 | Fuse: additional heater - Diesel heater relay (450) |
| FM6 | 10A | AP29 | Fuse: injection computer (120) - Diesel solenoid valve - Diesel heater |
| FM7 | -- | -- | Not in use |
| FM8 | -- | -- | Not in use |
| FM9 | 20A | BP7 | Fuse: fan unit low speed (700) Air conditioning clutch and variable displacement actuator |
| FM10 | 30A | BP14 | Fuse: ABS/ESP computer (1094) |
| FM11 | 30A | BP32 | Fuse: multifunction horn (1184) |
| FM12 | 70A | BP35 | Fuse: diesel pre-heating (257) |
| FM13 | 70A | BP91 | Fuse: thermoplungers (1072-1074) via relay R11 (1068) |
| FM14 | 70A | BP9 | Fuse: thermoplunger (898) via relay R1 (1067) and thermoplunger (1073) via relay R5 (1069) |
| FM15 | 60A | BP71 | Fuse: fan unit high and low speed (234-700) with air conditioning |
| FM16 | 40A | BP15 | Fuse: headlight washers - De-icing relay (645) |
| FM17 | 40A | BP8 | Fuse: ABS/ESP computer (1094) and ABS vacuum (R326) |
| FM18 | 70A | BP11 | Fuse: passenger compartment No. 1 (209-645) |
| FM19 | 70A | BP1 | Fuse: passenger compartment (645) |
| FM20 | 60A | BP13 | Fuse: passenger compartment No. 3 (209-290-645) |
| FM21 | 60A | BP12 | Fuse: consumer cut-off fuse supply (260-645-710) passenger compartment No. 2 |
| FM22 | 80 A | BP18 | Fuse: windscreen de-icing (612-629) |
| FM23 | 60A | BP2 | Fuse: windscreen wiper and electric parking brake |

Fuses and Relays

Fusebox and relays (engine side)

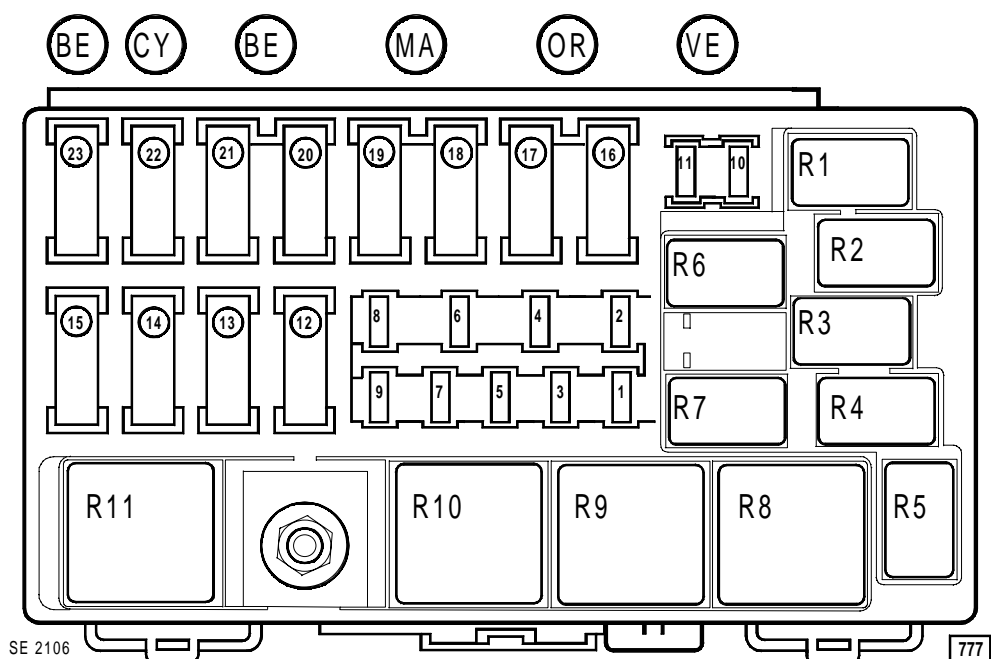

Allocation of relays (depending on equipment level)

F4R - G9T engines


| No. | Description |
|-----|--|
| R1 | Relay: additional heater 1 (1067-898) |
| R2 | Relay: low speed fan unit (700) with heating |
| R3 | Not in use |
| R4 | Not in use |
| R5 | Relay: additional heater 3 (1069-1073) |
| R6 | Relay: fuel pump (236) |
| R7 | Relay: diesel heater (450) |
| R8 | Relay: injection locking (238 or 983) |
| R9 | Relay: low speed fan unit (700) with air conditioning |
| R10 | Relay: fan unit (234) with air conditioning |
| R11 | Relay: additional heater 2 (1068-1072-1074) |

V4Y engine

| No. | Description |
|-----|--|
| R1 | Not in use |
| R2 | Relay: fan unit (234) with air conditioning |
| R3 | Not in use |
| R4 | Not in use |
| R5 | Not in use |
| R6 | Relay: injection (1047) |
| R7 | Relay: stepper motor safety (1315) |
| R8 | Relay: injection locking (238) |
| R9 | Relay: fan unit (234) with air conditioning |
| R10 | Relay: fan unit (700) with air conditioning |
| R11 | Not in use |

Fuses and Relays

Fusebox and relays (engine side)

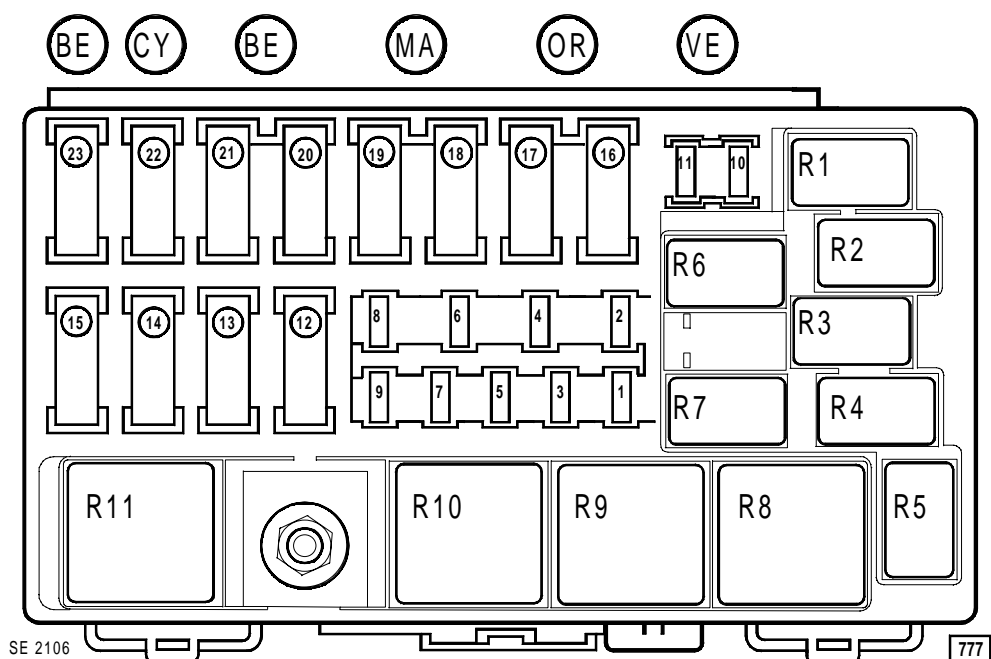

Allocation of relays (depending on equipment level)

P9X engine

| No. | Description |
|-----|--|
| R1 | Relay: additional heater 1 (1067-898) |
| R2 | Relay: fan unit (234) with air conditioning |
| R3 | Not in use |
| R4 | Not in use |
| R5 | Relay: additional heater 3 (1069-1073) |
| R6 | Not in use |
| R7 | Relay: diesel heater (450) |
| R8 | Relay: injection locking (238) |
| R9 | Relay: fan unit (234) with air conditioning |
| R10 | Relay: fan unit (700) with air conditioning |
| R11 | Relay: additional heater 2 (1068-1072-1074) |