

# 1999/2000 BUELL LIGHTNING X1

## SERVICE MANUAL

The information in this Service Manual applies  
to 1999 and 2000 Buell X1 models.

©COPYRIGHT 1999  
BUELL DISTRIBUTION CORPORATION  
ALL RIGHTS RESERVED  
PART NO. 99490-00Y

**MAINTENANCE** 1

**CHASSIS** 2

**ENGINE** 3

**FUEL SYSTEM** 4

**ELECTRIC STARTER** 5

**DRIVE/TRANSMISSION** 6

**ELECTRICAL** 7

**APPENDIX**

**INDEX**

# TABLE OF CONTENTS

	Page No.		Page No.
<b>SECTION 1-MAINTENANCE</b>			
<b>1.1 General</b> .....	1-1	Fuel .....	1-6
Servicing a New Motorcycle .....	1-1	Engine Oil .....	1-6
Safe Operating Maintenance .....	1-1	Recommended Oil Grades (table) .....	1-6
Shop Practices .....	1-1	Regular Maintenance Intervals (table) .....	1-7
Repair Notes .....	1-1	<b>1.4 Battery (1999 Models)</b> .....	1-11
Safety .....	1-1	General .....	1-11
Removing Parts .....	1-1	Inspection .....	1-11
Cleaning .....	1-1	Storage .....	1-12
Disassembly and Assembly .....	1-2	Removal .....	1-12
Checking Torques on Fasteners with Lock Patches .....	1-2	Installation .....	1-12
Repair and Replacement Procedures .....	1-2	<b>1.5 Battery (2000 Models)</b> .....	1-14
Hardware and Threaded Parts .....	1-2	General .....	1-14
Wiring, Hoses and Lines .....	1-2	Battery Testing .....	1-14
Instruments and Gauges .....	1-2	Voltmeter Test (Table) .....	1-14
Bearings .....	1-2	Disconnection and Removal .....	1-15
Bushings .....	1-2	Cleaning and Inspection .....	1-15
Gaskets .....	1-2	Storage .....	1-15
Lip Type Seals .....	1-2	Removal .....	1-15
O-Rings (Preformed Packings) .....	1-2	Installation and Connection .....	1-16
Gears .....	1-2	<b>1.6 Engine Lubrication System</b> ..	1-17
Shafts .....	1-2	Checking Engine Oil Level .....	1-17
Part Replacement .....	1-2	Recommended Oil Grades (Table) .....	1-17
Cleaning .....	1-3	Changing Engine Oil and Filter .....	1-18
Part Protection .....	1-3	<b>1.7 Brakes (1999 Models)</b> .....	1-19
Cleaning Process .....	1-3	General .....	1-19
Rust or Corrosion Removal .....	1-3	Bleeding Brakes .....	1-19
Bearings .....	1-3	Rear Brake Pedal .....	1-20
Inspecting .....	1-3	<b>1.8 Brake Pads and Rotors (1999 Models)</b> .....	1-21
Leak Dye .....	1-3	Brake Pads .....	1-21
Tool Safety .....	1-3	Brake Rotors .....	1-21
Air Tools .....	1-3	Brake Rotor Drive Pins .....	1-21
Wrenches .....	1-3	Brake Rotor Thickness .....	1-21
Pliers/Cutters/Prybars .....	1-3	Brake Carrier Lateral Free Play .....	1-22
Hammers .....	1-3	Brake Carrier Rotational Free Play .....	1-22
Punches/Chisels .....	1-3	<b>1.9 Brakes (2000 Models)</b> .....	1-23
Screwdrivers .....	1-3	General .....	1-23
Ratchets and Handles .....	1-4	Bleeding Brakes .....	1-23
Sockets .....	1-4	Rear Brake Pedal .....	1-25
Storage Units .....	1-4		
<b>1.2 Side Views</b> .....	1-5		
<b>1.3 Fluid Requirements</b> .....	1-6		
General .....	1-6		
United States System .....	1-6		
Metric System .....	1-6		
Steering Head Bearing Grease .....	1-6		
Primary Drive/Transmission Fluid .....	1-6		
Front Fork Oil .....	1-6		
Brake Fluid (1999 Models) .....	1-6		
Brake Fluid (2000 Models) .....	1-6		

	Page No.
<b>1.10 Brake Pads and Rotors (2000 Models)</b> .....	1-26
Brake Pads .....	1-26
Brake Rotors .....	1-26
Brake Rotor Thickness .....	1-26
<b>1.11 Tires and Wheels</b> .....	1-27
Tire Inflation .....	1-27
Tire Pressures (table) .....	1-27
Wheel Bearings .....	1-27
<b>1.12 Clutch</b> .....	1-28
Transmission Fluid .....	1-28
Adjustment .....	1-29
<b>1.13 Rear Belt Deflection</b> .....	1-30
Inspection .....	1-30
Adjustment .....	1-31
Axle Alignment .....	1-31
Deflection Adjustment .....	1-31
<b>1.14 Rear Belt and Sprocket</b> .....	1-32
General .....	1-32
Cleaning .....	1-32
Inspection .....	1-32
Rear Sprocket .....	1-32
Drive Belt .....	1-32
Drive Belt Wear Analysis (table) .....	1-33
<b>1.15 Primary Chain</b> .....	1-34
Inspection .....	1-34
Primary Chain Tension (table) .....	1-34
Adjustment .....	1-35
<b>1.16 Preload Adjustment</b> .....	1-36
General .....	1-36
Adjustment .....	1-36
<b>1.17 Suspension</b> .....	1-38
Adjustment .....	1-38
Front Fork Rebound .....	1-38
Front Fork Compression .....	1-38
Rear Shock Rebound .....	1-38
Rear Shock Compression .....	1-38

	Page No.
<b>1.18 Front Fork Oil</b> .....	1-39
Fork Oil Change .....	1-39
Fork Oil (table) .....	1-39
<b>1.19 Steering Head Bearings</b> .....	1-40
Inspection .....	1-40
Lubrication .....	1-40
Adjustment .....	1-41
<b>1.20 Spark Plugs</b> .....	1-42
Inspection .....	1-42
<b>1.21 Air Cleaner Filter</b> .....	1-43
Removal .....	1-43
Installation .....	1-43
<b>1.22 Throttle Cables</b> .....	1-44
Adjustment .....	1-44
Idle Adjustment .....	1-44
<b>1.23 Ignition Timing</b> .....	1-45
Inspection .....	1-45
Static Timing .....	1-45
<b>1.24 Handlebars</b> .....	1-47
Inspection .....	1-47
Adjustment .....	1-47
<b>1.25 Headlamp</b> .....	1-48
Inspection .....	1-48
Adjustment .....	1-48
<b>1.26 Storage</b> .....	1-49
General .....	1-49
Removal from Storage .....	1-49

	Page No.
<b>1.27 Troubleshooting</b> .....	1-50
General .....	1-50
Engine .....	1-50
Starter Motor Does Not Operate .....	1-50
Engine Turns Over But Does Not Start .....	1-50
Starts Hard .....	1-50
Starts But Runs Irregularly or Misses .....	1-50
Spark Plug Fouls Repeatedly .....	1-51
Pre-Ignition or Detonation (Knocks or Pings) .....	1-51
Overheating .....	1-51
Valve Train Noise .....	1-51
Excessive Vibration .....	1-51
Engine Lubrication System .....	1-51
Oil Does Not Return To Oil Tank .....	1-51
Engine Uses Too Much Oil/Smokes .....	1-51
Engine Leaks Oil From Cases, Etc. ....	1-51
Electrical System .....	1-51
Alternator Does Not Charge .....	1-51
Alternator Charge Rate Is Below Normal .....	1-51
Fuel .....	1-51
Fuel System Floods .....	1-51
Poor Fuel Economy .....	1-51
Transmission .....	1-51
Shifts Hard .....	1-51
Jumps Out of Gear .....	1-51
Clutch .....	1-52
Slips .....	1-52
Drags or Does Not Release .....	1-52
Chatters .....	1-52
Chassis .....	1-52
Irregular/Inadequate Brake Action .....	1-52
Handling Irregularities .....	1-52

## SECTION 2-CHASSIS

<b>2.1 Specifications</b> .....	2-1
Dimensions .....	2-1
Weight .....	2-1
Capacities .....	2-1
Tire and Position .....	2-1
Torque Values .....	2-1
<b>2.2 Tire Specifications</b> .....	2-4
General .....	2-4
Tire Fitment-Cast Wheels (table) .....	2-4
Tire Fitment-P/M Wheels (table) .....	2-4
<b>2.3 Vehicle Identification Number</b> .....	2-5
General .....	2-5
<b>2.4 Wheels</b> .....	2-6
General .....	2-6
Troubleshooting .....	2-6
Wheel Service (table) .....	2-6

	Page No.
<b>2.5 Front Wheel (1999 Models)</b> .....	2-8
Removal .....	2-8
Disassembly .....	2-8
Cleaning, Inspection and Repair .....	2-8
Assembly .....	2-9
Installation .....	2-10
<b>2.6 Front Wheel (2000 Models)</b> .....	2-11
Model Year Change .....	2-11
Removal .....	2-11
Disassembly .....	2-11
Cleaning and Inspection .....	2-11
Assembly .....	2-12
Installation .....	2-13
<b>2.7 Rear Wheel</b> .....	2-14
Removal .....	2-14
Disassembly .....	2-15
Cleaning, Inspection and Repair .....	2-15
Assembly .....	2-15
Installation .....	2-15
<b>2.8 Checking Cast Rim Runout</b> ..	2-17
General .....	2-17
Rim Lateral Runout .....	2-17
Rim Radial Runout .....	2-17
Wheel Runout (table) .....	2-17
<b>2.9 Tires</b> .....	2-18
Model Year Change .....	2-18
General .....	2-18
Removal .....	2-18
Cleaning and Inspection .....	2-18
Installation .....	2-19
Checking Tire Lateral Runout .....	2-19
Checking Tire Radial Runout .....	2-19
Adjustment .....	2-20
Wheel Balancing .....	2-20
<b>2.10 Brakes (1999 Models)</b> .....	2-21
General .....	2-21
Brake Troubleshooting (table) .....	2-21
<b>2.11 Front Brake Master Cylinder (1999 Models)</b> .....	2-22
Removal .....	2-22
Disassembly .....	2-22
Cleaning, Inspection and Repair .....	2-23
Assembly .....	2-23
Installation .....	2-24

<b>2.12 Front Brake Caliper (1999 Models)</b> .....	2-25
Removal.....	2-25
Disassembly.....	2-25
Cleaning, Inspection and Repair.....	2-26
Assembly.....	2-26
Installation.....	2-27
<b>2.13 Front Brake Line (1999 Models)</b> .....	2-29
Removal.....	2-29
Installation.....	2-29
<b>2.14 Rear Brake Master Cylinder (1999 Models)</b> .....	2-31
Removal.....	2-31
Disassembly.....	2-31
Cleaning, Inspection and Repair.....	2-32
Assembly.....	2-32
Installation.....	2-32
<b>2.15 Rear Brake Caliper (1999 Models)</b> .....	2-34
Removal.....	2-34
Disassembly.....	2-34
Cleaning, Inspection and Repair.....	2-34
Assembly.....	2-35
Installation.....	2-35
<b>2.16 Rear Brake Line and Switch (1999 Models)</b> .....	2-37
Removal.....	2-37
Installation.....	2-38
<b>2.17 Brakes (2000 Models)</b> .....	2-40
General.....	2-40
Brake Troubleshooting (table).....	2-41
<b>2.18 Front Brake Master Cylinder (2000 Models)</b> .....	2-42
Removal.....	2-42
Disassembly.....	2-42
Cleaning and Inspection.....	2-43
Assembly.....	2-43
Installation.....	2-44
<b>2.19 Front Brake Caliper (2000 Models)</b> .....	2-45
Removal.....	2-45
Disassembly.....	2-45
Cleaning and Inspection.....	2-46
Assembly.....	2-46
Installation.....	2-46

<b>2.20 Front Brake Line (2000 Models)</b> .....	2-48
Removal.....	2-48
Installation.....	2-48
<b>2.21 Rear Brake Master Cylinder (2000 Models)</b> .....	2-50
Removal.....	2-50
Disassembly.....	2-50
Cleaning and Inspection.....	2-51
Assembly.....	2-51
Installation.....	2-51
<b>2.22 Rear Brake Caliper (2000 Models)</b> .....	2-53
Removal.....	2-53
Disassembly.....	2-53
Cleaning and Inspection.....	2-53
Assembly.....	2-54
Installation.....	2-54
<b>2.23 Rear Brake Line and Switch (2000 Models)</b> .....	2-56
Removal.....	2-56
Installation.....	2-57
<b>2.24 Front Fork</b> .....	2-60
General.....	2-60
Removal.....	2-60
Disassembly.....	2-60
Cleaning, Inspection and Repair.....	2-62
Assembly.....	2-62
Installation.....	2-64
<b>2.25 Fork Stem and Bracket Assembly</b> .....	2-65
Removal/Disassembly.....	2-65
Cleaning, Inspection and Repair.....	2-65
Assembly/Installation.....	2-65
<b>2.26 Steering Head Lock</b> .....	2-67
Removal.....	2-67
Installation.....	2-67
<b>2.27 Swingarm</b> .....	2-69
Removal.....	2-69
Disassembly.....	2-70
Cleaning/Inspection.....	2-70
Assembly.....	2-71
Installation.....	2-71

	Page No.		Page No.
<b>2.28 Rear Shock Absorber</b> .....	2-74	<b>2.36 Footrests (1999 Models)</b> .....	2-90
Removal .....	2-74	Removal.....	2-90
Installation .....	2-74	Installation.....	2-90
<b>2.29 Suspension Theory</b> .....	2-76	<b>2.37 Footrests (2000 Models)</b> .....	2-91
Definitions.....	2-76	Removal.....	2-91
Damping .....	2-76	Installation.....	2-91
Compression .....	2-76	<b>2.38 Sprocket Cover</b> .....	2-92
Rebound .....	2-76	Removal/Disassembly.....	2-92
Vehicle Sag .....	2-76	Assembly/Installation .....	2-92
Rider Sag .....	2-76	<b>2.39 Front Fender</b> .....	2-93
Preload .....	2-76	Removal/Installation.....	2-93
General.....	2-76	<b>2.40 Rear Fender</b> .....	2-94
<b>2.30 Suspension Adjustments</b> .....	2-77	Removal.....	2-94
Spring Preload.....	2-77	Installation.....	2-94
Adjustments.....	2-77	<b>2.41 Belt Guards</b> .....	2-95
Troubleshooting.....	2-77	Removal.....	2-95
General Suspension Problems (table) .....	2-77	Installation.....	2-95
Rear Suspension Problems (table) .....	2-78	<b>2.42 Chin Fairing</b> .....	2-96
Front Suspension Problems (table) .....	2-78	Removal.....	2-96
Rider Suspension Preferences (table) .....	2-79	Installation.....	2-96
<b>2.31 Throttle Control</b> .....	2-80	<b>2.43 Fuel Tank Cover</b> .....	2-97
Model Year Change.....	2-80	Model Year Change.....	2-97
Removal/Disassembly .....	2-80	Removal.....	2-97
Cleaning, Inspection and Repair .....	2-80	Installation.....	2-97
Assembly/Installation.....	2-80	<b>2.44 Air Scoop</b> .....	2-98
<b>2.32 Clutch Control</b> .....	2-82	Removal.....	2-98
Adjustment.....	2-82	Installation.....	2-98
Removal/Disassembly .....	2-82	<b>2.45 Trunk</b> .....	2-99
Clutch Cable-Lower .....	2-82	Removal.....	2-99
Clutch Hand Control .....	2-82	Installation.....	2-99
Assembly/Installation.....	2-83	<b>2.46 Tail Section</b> .....	2-100
Clutch Cable-Lower .....	2-83	Removal.....	2-100
Clutch Hand Control .....	2-83	Cleaning.....	2-100
<b>2.33 Instrument Support</b> .....	2-84	Disassembly.....	2-100
Removal .....	2-84	Assembly .....	2-102
Installation .....	2-84	Installation.....	2-102
<b>2.34 Handlebars</b> .....	2-85	<b>2.47 Windscreen</b> .....	2-103
Removal .....	2-85	Removal.....	2-103
Installation .....	2-85	Installation.....	2-103
<b>2.35 Exhaust System</b> .....	2-86		
Removal/Disassembly .....	2-86		
Muffler .....	2-86		
Exhaust Header .....	2-86		
Assembly/Installation.....	2-88		
Muffler .....	2-88		
Exhaust Header .....	2-89		

	Page No.
<b>2.48 Seat (1999 Models)</b> .....	2-104
Removal .....	2-104
Installation .....	2-104
Attachment Points .....	2-104
<b>2.49 Seat (2000 Models)</b> .....	2-105
Model Year Change .....	2-105
Removal .....	2-105
Installation .....	2-105
Attachment Points .....	2-105
<b>2.50 Side Stand</b> .....	2-106
Model Year Change .....	2-106
General .....	2-106
Removal/Disassembly .....	2-106
Assembly/Installation .....	2-106

## SECTION 3-ENGINE

<b>3.1 Specifications</b> .....	3-1
General .....	3-1
Camshaft Specifications .....	3-1
Engine Ignition Specifications .....	3-1
Service Wear Limits .....	3-1
Torque Values .....	3-4
<b>3.2 Engine</b> .....	3-5
Model Year Change .....	3-5
General .....	3-5
Cylinder .....	3-5
Crankcase .....	3-5
Gearcase .....	3-5
Fuel .....	3-5
Gasoline/alcohol Blends .....	3-5
Lubrication .....	3-5
Adjustment/Testing .....	3-6
General .....	3-6
Compression Test Procedure .....	3-6
Compression Test Results (table) .....	3-6
Cylinder Leakage Test .....	3-7
Diagnosing Smoking Engine/ High Oil Consumption .....	3-7
Air Leakage Test (table) .....	3-7
<b>3.3 Stripping Motorcycle For Engine Repair</b> .....	3-8
Disassembling Engine for Cylinder Head Repair .....	3-8
Engine Crankcase Replacement or Complete Engine Removal .....	3-8
<b>3.4 Installing The Engine</b> .....	3-10
Engine Crankcase Installation .....	3-10
Engine Installation After Cylinder Head Repair .....	3-11

<b>3.5 Cylinder Head</b> .....	3-12
Removal .....	3-12
Disassembly .....	3-14
Cleaning, Inspection and Repair .....	3-15
Rocker Arms and Bushings .....	3-16
Replacing Valve Guides .....	3-17
Valve Stem Clearances (table) .....	3-17
Grinding Valve Faces and Seats .....	3-18
Neway Valve Seat Cutters (table) .....	3-18
Replacing Valve Seats .....	3-19
Lapping Valve Faces and Seats .....	3-19
Assembly .....	3-20
Installation .....	3-21
Push Rod Selection (table) .....	3-21
Lower Rocker Box Hardware (table) .....	3-22

<b>3.6 Cylinder and Piston</b> .....	3-23
Removal/Disassembly .....	3-23
Cleaning, Inspection and Repair .....	3-24
Checking Gasket Surface .....	3-24
Measuring Cylinder Bore .....	3-25
Cylinder Bore Service Wear Limits (table) .....	3-25
Measuring Piston .....	3-26
Fitting Cylinder to Piston .....	3-26
Boring and Honing Cylinder .....	3-26
Fitting Piston Rings .....	3-26
Final Cylinder Bore Sizes (table) .....	3-26
Connecting Rod Bushing .....	3-28
Assembly/Installation .....	3-29

<b>3.7 Lubrication System</b> .....	3-30
Checking and Adding Oil .....	3-30
Changing Oil and Filter .....	3-30
Winter Lubrication .....	3-30

<b>3.8 Oil Hose Routing</b> .....	3-31
General .....	3-31

<b>3.9 Oil Tank</b> .....	3-32
Removal/Disassembly .....	3-32
Assembly/Installation .....	3-32

<b>3.10 Oil Pressure Indicator Switch</b> .....	3-33
General .....	3-33
Oil Pressure Signal Light .....	3-33
Oil Pressure .....	3-33
Troubleshooting Oil Pressure Signal Light (table) .....	3-33

<b>3.11 Crankcase Breathing System</b> .....	3-34
General .....	3-34

### 3.12 Oiling System (Color Foldout)..... 3-35

### 3.13 Oil Pump..... 3-36

General .....	3-36
Removal/Disassembly .....	3-37
Cleaning, Inspection and Repair .....	3-38
Assembly/Installation .....	3-38

### 3.14 Oil Filter Mount..... 3-39

General .....	3-39
Disassembly .....	3-39
Cleaning/Inspection .....	3-39
Assembly .....	3-39

### 3.15 Valve Tappets (1999 Models)..... 3-40

General .....	3-40
Removal .....	3-40
Cleaning/Inspection .....	3-40
Installation .....	3-41

### 3.16 Hydraulic Lifters (2000 Models)..... 3-42

General .....	3-42
Removal .....	3-42
Cleaning/Inspection .....	3-42
Installation .....	3-43

### 3.17 Gearcase Cover and Cam Gears (1999 Models)..... 3-44

General .....	3-44
Removal/Disassembly .....	3-44
Cleaning, Inspection and Repair .....	3-45
Cam and Pinion Gear Identification, Inspection, and Selection .....	3-45
Cam/Pinion Gear Color Code & Diameter (table) .....	3-46
Bushing Inspection and Removal .....	3-47
Bushing Installation .....	3-47
Gear Shaft Specifications (table) .....	3-47
Bushing Reaming .....	3-48
Assembly/Installation .....	3-50

### 3.18 Gearcase Cover and Cam Gears (2000 Models)..... 3-52

Model Year Change.....	3-52
General .....	3-52
Removal/Disassembly .....	3-53
Cleaning and Inspection .....	3-53

Cam and Pinion Gear Identification, Inspection, and Selection .....	3-53
Cam/Pinion Gear Color Code & Diameter (table) .....	3-54
Bushing Inspection and Removal .....	3-55
Bushing Installation .....	3-55
Gear Shaft Specifications (table) .....	3-55
Bushing Reaming .....	3-56
Assembly/Installation .....	3-58

### 3.19 Crankcase (1999 Models)..... 3-60

General .....	3-60
Adjustment/Testing .....	3-60
Flywheel End Play .....	3-60
Flywheel End Play Spacers (table) .....	3-60
Disassembly .....	3-61
Crankcase Halves .....	3-61
Flywheels .....	3-63
Cleaning/Inspection .....	3-63
Replacing Flywheel Washers .....	3-65
Lapping Connecting Rod Races .....	3-65
Fitting Rod Bearings .....	3-66
Fitting Sprocket Bearings .....	3-67
Fitting Pinion Bearings .....	3-67
Race Diameter and Crank Pin Size (table) .....	3-67
Connecting Rod Specifications (table) .....	3-67
Pinion Shaft Bearing Selection (table) .....	3-70
Lapping Engine Main Bearing Races .....	3-71
Assembly .....	3-71
Flywheels .....	3-71
Crankcase Halves .....	3-73

### 3.20 Crankcase (2000 Models)..... 3-77

Model Year Change.....	3-77
General .....	3-77
Adjustment/Testing .....	3-77
Flywheel End Play .....	3-77
Flywheel End Play Shims (table) .....	3-77
Gearshaft Bearings (table) .....	3-77
Disassembly .....	3-78
Crankcase Halves .....	3-78
Flywheel/Connecting Rod Assembly.....	3-81
Cleaning/Inspection .....	3-81
Flywheel/Connecting Rod Assembly.....	3-81
Fitting Sprocket Bearings .....	3-81
Fitting Pinion Bearings .....	3-81
Race Diameter and Crank Pin Size (table) .....	3-82
Pinion Shaft Bearing Selection (table) .....	3-85
Lapping Engine Main Bearing Races .....	3-85
Assembly .....	3-85
Crankcase Halves .....	3-85



## SECTION 4-FUEL SYSTEM

### 4.1 Dynamic Digital Fuel Injection

Introduction	4-1
General	4-1
For More Information	4-1
Troubleshooting	4-1
Fuel Injection Components	4-1

### 4.2 Diagnostic Introduction

System Problems	4-3
No Start	4-3
Poor Performance	4-3
Check Engine Lamp	4-3
Resolving Problems	4-3

### 4.3 Checking For Trouble Codes

Model Year Change	4-4
Check Engine Lamp	4-4
Code Types	4-5
Current	4-5
Historic	4-5
Functional	4-5
Retrieving Trouble Codes	4-5
Multiple Trouble Codes	4-5

### 4.4 Scanalyzer

Scanalyzer Diagnostics	4-6
Data Link Connector	4-6
Scanalyzer Cartridge	4-6
Installation	4-6
Usage	4-8
Checking Codes	4-8
Clearing Codes	4-8
Removal	4-8

### 4.5 Check Engine Lamp Diagnostics

Activation	4-9
Clearing Codes	4-10

### 4.6 Breakout Box

General	4-11
Installation	4-11
Removal	4-11

### 4.7 Wiggle Test

General	4-12
Procedure	4-12
Using Scanalyzer	4-12
Using DVOM	4-12

### 4.8 Initial Diagnostic Check

General	4-13
Diagnostic Notes	4-13
Scanalyzer Icon	4-13
Circuit Diagram/Wire Harness Connector Table	4-13
Job/Time Code Values	4-13
Initial Diagnostics	4-13
General Information	4-13
Diagnostic Tips	4-13
Diagnostic Notes	4-13
Typical Scan Values (table)	4-14
Engine Starts Hard (table)	4-14
Engine Performance Problems (table)	4-14
Engine Exhaust Emits Black Smoke (table)	4-14
Trouble Codes and Fault Conditions (table)	4-15
Wire Harness Connectors (table)	4-16
Diagnostic Check (Part 1 of 2) (flow chart)	4-17
Diagnostic Check (Part 2 of 2) (flow chart)	4-18

### 4.9 Check Engine Lamp Not Illuminated at Key ON

General	4-19
Diagnostics	4-19
Diagnostic Tips	4-19
Diagnostic Notes	4-19
Wire Harness Connectors (table)	4-20
Test (flow chart)	4-21

### 4.10 Check Engine Lamp On Continuously

General	4-22
Diagnostics	4-22
Diagnostic Notes	4-22
Wire Harness Connectors (table)	4-23
Test (flow chart)	4-24

### 4.11 Engine Cranks But Will Not Start

General	4-25
Diagnostics	4-25
Diagnostic Notes	4-25
Wire Harness Connectors (table)	4-25
Test (Part 1 of 3) (flow chart)	4-27
Test (Part 2 of 3) (flow chart)	4-28
Test (Part 3 of 3) (flow chart)	4-29

### 4.12 No ECM Power

General	4-30
Diagnostics	4-30
Diagnostic Notes	4-30
Wire Harness Connectors (table)	4-31
No ECM Power (flow chart)	4-32

	Page No.
<b>4.13 Fuel Pressure Test</b> .....	4-33
Inspection .....	4-33
Diagnostics .....	4-34
Diagnostic Notes .....	4-34
Wire Harness Connectors (table) .....	4-35
Test (Part 1 of 2) (flow chart) .....	4-36
Test (Part 2 of 2) (flow chart) .....	4-37
<b>4.14 Idle Speed Control</b> .....	4-38
Adjustments .....	4-38
<b>4.15 Misfire</b> .....	4-39
General .....	4-39
Misfire At Idle or Under Load .....	4-39
Diagnostics .....	4-39
Diagnostic Notes .....	4-39
Spark Plug Cables (table) .....	4-39
Wire Harness Connectors (table) .....	4-40
Test (Part 1 of 2) (flow chart) .....	4-41
Test (Part 2 of 2) (flow chart) .....	4-42
<b>4.16 Trouble Code 11</b> .....	4-43
General .....	4-43
Throttle Position Sensor .....	4-43
Diagnostics .....	4-43
Diagnostic Tips .....	4-43
Scanalyzer Notes .....	4-43
Diagnostic Notes .....	4-48
Wire Harness Connectors (table) .....	4-44
Code 11 Test (Part 1 of 2) (flow chart) .....	4-45
Code 11 Test (Part 2 of 2) (flow chart) .....	4-46
<b>4.17 Trouble Code 13</b> .....	4-47
General .....	4-47
Oxygen Sensor (O <sub>2</sub> ) .....	4-47
Diagnostics .....	4-47
Diagnostic Tips .....	4-47
Diagnostic Notes .....	4-47
Wire Harness Connectors (table) .....	4-48
Code 13 Test (Part 1 of 3) (flow chart) .....	4-49
Code 13 Test (Part 2 of 2) (flow chart) .....	4-50
Code 13 Test (Part 3 of 3) (flow chart) .....	4-51
<b>4.18 Trouble Code 14</b> .....	4-52
General .....	4-52
Engine Temperature Sensor .....	4-52
Diagnostics .....	4-52
Diagnostic Tips .....	4-52
Diagnostic Notes .....	4-52
Scanalyzer Notes .....	4-52
Engine Temperature Sensor Specifications (table) .....	4-52
Wire Harness Connectors (table) .....	4-53
Code 14 Test (Part 1 of 2) (flow chart) .....	4-54
Code 14 Test (Part 2 of 2) (flow chart) .....	4-55

	Page No.
<b>4.19 Trouble Code 15</b> .....	4-56
General .....	4-56
Intake Air Temperature Sensor .....	4-56
Diagnostics .....	4-56
Diagnostic Tips .....	4-56
Diagnostic Notes .....	4-56
Scanalyzer Notes .....	4-56
Intake Air Temperature Sensor Specifications (table) .....	4-56
Wire Harness Connectors (table) .....	4-57
Code 15 Test (Part 1 of 2) (flow chart) .....	4-58
Code 15 Test (Part 2 of 2) (flow chart) .....	4-59
<b>4.20 Trouble Code 16</b> .....	4-60
General .....	4-60
Battery Voltage .....	4-60
Diagnostics .....	4-60
Diagnostic Notes .....	4-60
Scanalyzer Notes .....	4-60
Wire Harness Connectors (table) .....	4-61
Code 16 Test (Part 1 of 2) (flow chart) .....	4-62
Code 16 Test (Part 2 of 2) (flow chart) .....	4-63
<b>4.21 Trouble Codes 23 and 32</b> .....	4-64
General .....	4-64
Front Fuel Injector (Code 23) And Rear Fuel Injector (Code 32) .....	4-64
Diagnostics .....	4-64
Diagnostic Notes .....	4-64
Scanalyzer Notes .....	4-64
Wire Harness Connectors (table) .....	4-65
Code 23/32 Test (Part 1 of 2) (flow chart) .....	4-66
Code 23/32 Test (Part 2 of 2) (flow chart) .....	4-67
<b>4.22 Trouble Codes 24 and 25</b> .....	4-68
General .....	4-68
Front Ignition Coil (Code 24)And Rear Ignition Coil (Code 25) .....	4-68
Diagnostics .....	4-68
Diagnostic Notes .....	4-68
Scanalyzer Notes .....	4-68
Wire Harness Connectors (table) .....	4-69
Code 24/25 Test (flow chart) .....	4-70
<b>4.23 Trouble Code 33</b> .....	4-71
General .....	4-71
Fuel Pump .....	4-71
Diagnostics .....	4-71
Diagnostic Notes .....	4-71
Scanalyzer Notes .....	4-71
Wire Harness Connectors (table) .....	4-72
Code 33 Test (flow chart) .....	4-73

	Page No.		Page No.
<b>4.24 Trouble Code 35</b> .....	4-74	<b>4.31 Sensors</b> .....	4-94
General .....	4-74	General .....	4-94
Tachometer .....	4-74	Oxygen Sensor .....	4-94
Diagnostics .....	4-74	Removal .....	4-94
Diagnostic Notes .....	4-74	Installation .....	4-94
Wire Harness Connectors (table) .....	4-75	Engine Temperature Sensor .....	4-94
Code 35 Test (flow chart) .....	4-76	Model Year Change.....	4-94
		Removal .....	4-94
		Installation .....	4-94
<b>4.25 Trouble Code 44</b> .....	4-77	<b>4.32 Bank Angle Sensor</b> .....	4-95
General .....	4-77	Removal .....	4-95
Bank Angle Sensor .....	4-77	Installation .....	4-95
Diagnostics .....	4-77		
Diagnostic Notes .....	4-77	<b>4.33 Throttle Position Sensor</b> .....	4-96
Wire Harness Connectors (table) .....	4-78	Removal .....	4-96
Code 44 Test (Part 1 of 2) (flow chart) .....	4-79	Installation .....	4-96
Code 44 Test (Part 2 of 2) (flow chart) .....	4-80	Calibration .....	4-96
<b>4.26 Trouble Codes 52, 53, 54 and 55</b> .....	4-81	<b>4.34 Fuel Tank</b> .....	4-97
General .....	4-81	Removal .....	4-97
ECM Failure .....	4-81	Disassembly/Assembly .....	4-98
		Cleaning, Inspection and Repair .....	4-98
		Installation .....	4-99
		Fuel Tank Pressure Test .....	4-99
<b>4.27 Trouble Code 56</b> .....	4-82		
General .....	4-82	<b>4.35 Fuel Tank Vent Valve</b> .....	4-100
Cam Sync Failure .....	4-82	Model Year Change.....	4-100
Diagnostics .....	4-82	General.....	4-100
Diagnostic Notes .....	4-82	Removal .....	4-100
Wire Harness Connectors (table) .....	4-83	Installation .....	4-100
Code 56 (Part 1 of 2) (flow chart) .....	4-84		
Code 56 (Part 2 of 2) (flow chart) .....	4-85	<b>4.36 Inline Fuel Filter</b> .....	4-102
		Model Year Change.....	4-102
		General .....	4-102
		Removal/Installation .....	4-102
<b>4.28 Electronic Control Module</b> ...	4-86		
Removal .....	4-86	<b>4.37 Fuel Pump</b> .....	4-103
Installation .....	4-86	Removal .....	4-103
		Repair .....	4-103
		Fuel Pump Replacement .....	4-103
		Fuel Pressure Regulator Replacement .....	4-104
		Low Fuel Level Sensor Replacement .....	4-104
		Installation .....	4-104
<b>4.29 Cam Position Sensor and Rotor</b> .....	4-88		
Removal .....	4-88	<b>4.38 Throttle Body and Manifold</b> .....	4-105
Installation .....	4-91	General .....	4-105
		Removal .....	4-105
		Repair .....	4-106
		Throttle Position Sensor .....	4-106
		Fuel Injectors .....	4-106
		Installation .....	4-107
<b>4.30 Ignition Coil</b> .....	4-92		
Troubleshooting .....	4-92		
Ignition Coil Primary Circuit Test .....	4-92		
Ignition Coil Secondary Circuit Test .....	4-92		
Test Results .....	4-92		
Ignition Coil Substitution .....	4-92		
Removal .....	4-93		
Installation .....	4-93		

	Page No.
<b>4.39 Air Cleaner</b> .....	4-109
Removal .....	4-109
Inspection .....	4-109
Installation .....	4-109

#### **4.40 Evaporative Emissions Control-California Models** .....

General .....	4-111
Troubleshooting .....	4-111
Removal .....	4-112
Vent Valve .....	4-112
Canister .....	4-112
Installation .....	4-112
Vent Valve .....	4-112
Canister .....	4-113
Hose Routing .....	4-113
Throttle Body Manifold .....	4-113
Canister Hose Routings .....	4-113

### **SECTION 5-ELECTRIC STARTER**

<b>5.1 Specifications</b> .....	5-1
Starter .....	5-1
Service Wear Limits .....	5-1
Torque Values .....	5-1
<b>5.2 Electric Starter System</b> .....	5-2
General .....	5-2
Wiring Diagrams .....	5-2
Starter Relay .....	5-2
Starter Interlock .....	5-2
Operation .....	5-2
Troubleshooting (table) .....	5-4
<b>5.3 Starting System Diagnosis</b> .....	5-6
<b>5.4 Starter Activation Circuits</b> .....	5-8
<b>5.5 Diagnostics/Troubleshooting</b> .....	5-9
General .....	5-9
Voltage Drops .....	5-9
<b>5.6 Starter System Testing</b> .....	5-11
"On Motorcycle" Tests .....	5-11
Starter Relay Test .....	5-11
Starter Current Draw Test .....	5-11

	Page No.
<b>5.7 Starter</b> .....	5-12
Removal .....	5-12
Testing Assembled Starter .....	5-12
Free Running Current Draw Test .....	5-12
Starter Solenoid .....	5-13
Solenoid Pull-in Test .....	5-13
Solenoid Hold-in Test .....	5-13
Solenoid Return Test .....	5-13
Disassembly, Inspection and Repair .....	5-14
Assembly .....	5-17
Installation .....	5-18

#### **5.8 Starter Solenoid** .....

General .....	5-19
Disassembly .....	5-19
Assembly .....	5-19

### **SECTION 6-DRIVE/TRANSMISSION**

<b>6.1 Specifications</b> .....	6-1
Transmission .....	6-1
Transmission Gear Ratios .....	6-1
Primary Drive .....	6-1
Final Drive .....	6-1
Clutch Plate Thickness .....	6-1
Torque Values .....	6-2
<b>6.2 Primary Chain</b> .....	6-3
General .....	6-3
Adjustment/Lubrication .....	6-3
Removal .....	6-3
Primary Cover .....	6-3
Primary Chain Adjuster .....	6-4
Installation .....	6-4
Primary Chain Adjuster .....	6-4
Primary Cover .....	6-5
<b>6.3 Secondary Drive Belt</b> .....	6-6
General .....	6-6
Removal .....	6-6
Installation .....	6-7
<b>6.4 Clutch Release Mechanism</b> .....	6-8
Adjustment .....	6-8
Disassembly .....	6-8
Cleaning, Inspection and Repair .....	6-8
Assembly .....	6-9

<b>6.5 Primary Drive/Clutch</b> .....	6-10
General .....	6-10
Clutch Troubleshooting (table) .....	6-10
Removal/Disassembly .....	6-11
Clutch Pack .....	6-11
Primary Chain/Drive .....	6-13
Inspection/Repair .....	6-14
Assembly .....	6-15
Clutch Pack .....	6-15
Primary Drive .....	6-15
Installation .....	6-16
<b>6.6 Transmission</b> .....	6-17
Model Year Change .....	6-17
General .....	6-17
Lubrication .....	6-17
<b>6.7 Transmission Case</b> .....	6-19
General .....	6-19
Removal .....	6-19
Cleaning, Inspection and Repair .....	6-20
Neutral Indicator Switch .....	6-20
<b>6.8 Shifter Forks and Drum</b> .....	6-21
Disassembly .....	6-21
Cleaning, Inspection and Repair .....	6-21
Assembly .....	6-22
<b>6.9 Mainshaft and Countershaft</b> .....	6-24
Disassembly .....	6-24
Cleaning, Inspection and Repair .....	6-27
Assembly .....	6-27
<b>6.10 Main Drive Gear</b> .....	6-30
Removal .....	6-30
Disassembly .....	6-31
Assembly .....	6-31
Installation .....	6-31
<b>6.11 Access Door Bearings</b> .....	6-32
Removal .....	6-32
Mainshaft and Countershaft Bearings .....	6-32
Shift Drum Bushing .....	6-32
Installation .....	6-32
Mainshaft and Countershaft Bearings .....	6-32
Shift Drum Bushing .....	6-32
<b>6.12 Right Transmission Case Bearings</b> .....	6-33
Removal .....	6-33
Installation .....	6-33
Mainshaft 5th Gear Ball Bearing .....	6-33
Countershaft Needle Bearing .....	6-33
Shift Drum Needle Bearing .....	6-33

<b>6.13 Transmission Installation and Shifter Pawl Adjustment</b> .....	6-34
---	------

## SECTION 7-ELECTRICAL

<b>7.1 Specifications</b> .....	7-1
Battery .....	7-1
Spark Plugs .....	7-1
Alternator .....	7-1
Regulator .....	7-1
Ignition Coil Resistance .....	7-1
Electrical System .....	7-1
Bulb Chart .....	7-1
Torque Specifications .....	7-2
<b>7.2 Ignition System</b> .....	7-3
General .....	7-3
Troubleshooting .....	7-3
<b>7.3 Ignition/Headlamp Key Switch</b> .....	7-5
General .....	7-5
Removal .....	7-5
Ignition Key Switch Positions (table) .....	7-5
Indicator Markers (table) .....	7-5
Installation .....	7-6
<b>7.4 Spark Plug Cables</b> .....	7-7
General .....	7-7
Removal .....	7-7
Inspection .....	7-7
Installation .....	7-7
<b>7.5 Starter Interlock</b> .....	7-8
Model Year Change .....	7-8
General .....	7-8
Starter Circuit .....	7-8
Ignition Circuit .....	7-8
Starter Interlock Troubleshooting (table) .....	7-8
Diagnostics .....	7-9
Ignition Test (flow chart) .....	7-10
Starter Test (Part 1 of 2) (flow chart) .....	7-10
Starter Test (Part 2 of 2) (flow chart) .....	7-11
Testing/Replacement .....	7-13
Side Stand Switch .....	7-13
Clutch Switch .....	7-13
Ignition Relay .....	7-14
Starter Relay .....	7-14
Ignition Fuse .....	7-14
Diodes .....	7-14
Main Circuit Breaker .....	7-14

<b>7.6 Charging System</b> .....	7-15	<b>7.12 Headlamp</b> .....	7-34
General .....	7-15	Removal/Disassembly .....	7-34
Alternator .....	7-15	Removal .....	7-34
Voltage Regulator .....	7-15	Headlamp Bulb .....	7-34
Troubleshooting .....	7-15	Headlamp Housing and Brackets .....	7-34
Battery .....	7-15	Installation .....	7-35
Wiring .....	7-15	Headlamp Bulb .....	7-35
Voltage Regulator Inspection .....	7-15	Headlamp Housing and Brackets .....	7-35
Testing .....	7-18	<b>7.13 Tail Lamp</b> .....	7-36
Voltage Regulator Bleed Test .....	7-18	Removal/Disassembly .....	7-36
Milliampere Draw Test .....	7-18	Assembly/Installation .....	7-36
Total Current Draw Test .....	7-18	<b>7.14 Turn Signals</b> .....	7-37
Current and Voltage Output Test .....	7-19	Removal .....	7-37
Voltage Output Test .....	7-19	Bulbs .....	7-37
Stator Check .....	7-19	Front .....	7-37
AC Output Check .....	7-20	Rear .....	7-37
<b>7.7 Alternator</b> .....	7-21	Installation .....	7-37
Removal/Disassembly .....	7-21	Front .....	7-37
Rotor .....	7-21	Rear .....	7-38
Stator .....	7-21	<b>7.15 Turn Signal Flasher</b> .....	7-39
Cleaning, Inspection and Repair .....	7-22	Removal .....	7-39
Assembly/Installation .....	7-22	Installation .....	7-39
<b>7.8 Voltage Regulator</b> .....	7-23	<b>7.16 Handlebar Switches</b> .....	7-40
General .....	7-23	Removal .....	7-40
Removal .....	7-23	Right Side .....	7-40
Installation .....	7-23	Left Side .....	7-40
<b>7.9 Battery (1999 Models)</b> .....	7-24	Installation .....	7-41
General .....	7-24	Right Side .....	7-41
Testing .....	7-24	Left Side .....	7-41
Open Circuit Voltage Test .....	7-24	<b>7.17 Speedometer Sensor</b> .....	7-43
Charging Rates (table) .....	7-24	Removal .....	7-43
Load Test .....	7-25	Installation .....	7-43
Charging Battery .....	7-25	<b>7.18 Speedometer</b> .....	7-44
<b>7.10 Battery Cables</b> <b>(1999 Models)</b> .....	7-26	General .....	7-44
Removal .....	7-26	Removal .....	7-44
Installation .....	7-26	Installation .....	7-45
<b>7.11 Battery (2000 Models)</b> .....	7-28	<b>7.19 Tachometer</b> .....	7-46
General .....	7-28	General .....	7-46
Battery Testing .....	7-28	Removal .....	7-46
Voltmeter Test .....	7-28	Installation .....	7-47
Disconnection and Removal .....	7-29	<b>7.20 Speedometer</b> <b>Performance Check</b> .....	7-48
Cleaning and Inspection .....	7-29	General .....	7-48
Battery Charging .....	7-29	Testing .....	7-48
Safety Precautions .....	7-29	Speedometer Operation Test .....	7-48
Charging Battery .....	7-29	Speedometer Test Frequency (table) .....	7-48
Battery Charging Rates and Times (table) .....	7-30	Speedometer Needle Sweep Test .....	7-49
Battery Testing .....	7-30	Speedometer Sensor Test .....	7-49
Load Test .....	7-30	Speedometer Test: Chart 1 (flowchart) .....	7-50
Battery Cable Routing .....	7-31	Speedometer Test: Chart 2A (flowchart) .....	7-51
Battery Installation and Connection .....	7-31	Speedometer Test: Chart 2B (flow chart) .....	7-52
Battery Stocking and Selling .....	7-33		

<b>7.21 Tachometer Performance Check</b> .....	7-53
General .....	7-53
Testing .....	7-53
Operation Test .....	7-53
Tachometer Accuracy Tolerances (table) .....	7-53
Sweep Test .....	7-53
 <b>7.22 Horn</b> .....	7-54
Removal .....	7-54
Installation .....	7-54
Troubleshooting .....	7-55
 <b>7.23 Neutral Indicator Switch</b> .....	7-56
General .....	7-56
Testing .....	7-56
Removal/Installation .....	7-56
 <b>7.24 Fuses and Circuit Breakers</b> .....	7-57
General .....	7-57
Fuses .....	7-57
Master Circuit Breaker .....	7-57
 <b>7.25 Electrical Connectors</b> .....	7-58
General .....	7-58
Electrical Connectors (Table).....	7-58
 <b>7.26 Deutsch Electrical Connectors</b> .....	7-59
General .....	7-59
Removing/Installing Sockets .....	7-59
Removing/Installing Pins .....	7-59
Assembly/Installation .....	7-59
Crimping Instructions .....	7-60
 <b>7.27 Amp Multilock Electrical Connectors</b> .....	7-61
Removing Socket/Pin Terminals .....	7-61
Installing Socket/Pin Terminals .....	7-62
Crimping Instructions .....	7-63
 <b>Wiring Diagram</b> .....	7-65

## APPENDIX

---

<b>Appendix A-Tools</b> .....	A-1
 <b>Appendix B-Metric Conversions</b>	B-1