

# Quick Reference Guide

<b>General Information</b>	<b>1</b>
<b>Fuel System</b>	<b>2</b>
<b>Cooling System</b>	<b>3</b>
<b>Engine Top End</b>	<b>4</b>
<b>Clutch</b>	<b>5</b>
<b>Engine Lubrication System</b>	<b>6</b>
<b>Engine Removal/Installation</b>	<b>7</b>
<b>Crankshaft/Transmission</b>	<b>8</b>
<b>Wheels/Tires</b>	<b>9</b>
<b>Final Drive</b>	<b>10</b>
<b>Brakes</b>	<b>11</b>
<b>Suspension</b>	<b>12</b>
<b>Steering</b>	<b>13</b>
<b>Frame</b>	<b>14</b>
<b>Electrical System</b>	<b>15</b>
<b>Appendix</b>	<b>16</b>
<b>Suppelement-1997 Models</b>	<b>17</b>

This quick reference guide will assist you in locating a desired topic or procedure.

- Bend the pages back to match the black tab of the desired chapter number with the black tab on the edge at each table of contents page.
- Refer to the sectional table of contents for the exact pages to locate the specific topic required.

# General Information

## Table of Contents

Before Servicing .....	1-2
Model Identification .....	1-4
General Specifications .....	1-6
Periodic Maintenance Chart .....	1-9
Technical Information – Maintenance Free Battery .....	1-10
(I) Construction .....	1-10
(II) Main Features.....	1-10
(III) Principle of Sealing Structure .....	1-10
(IV) Filling the Battery with Electrolyte .....	1-11
(V) Initial Charge .....	1-12
(VI) Precautions.....	1-13
(VII) Interchangeability with Ordinary Battery .....	1-13
Technical Information – Alternator Unit .....	1-14
Technical Information – Engine Lubrication System .....	1-14
Technical Information – Swingarm.....	1-15
Torque and Locking Agent.....	1-16
Special Tools and Sealant .....	1-21
Cable, Wire, and Hose Routing .....	1-27

## 1-2 GENERAL INFORMATION

### Before Servicing

---

Before starting to service a motorcycle, careful reading of the applicable section is recommended to eliminate unnecessary work. Photographs, diagrams, notes, cautions, warnings, and detailed descriptions have been included wherever necessary. Nevertheless, even a detailed account has limitations, a certain amount of basic knowledge is also required for successful work.

#### Especially note the following:

- (1) **Dirt**

Before removal and disassembly, clean the motorcycle. Any dirt entering the engine or other parts will work as an abrasive and shorten the life of the motorcycle. For the same reason, before installing a new part, clean off any dust or metal filings.
- (2) **Battery Ground**

Remove the ground (-) lead from the battery before performing any disassembly operations on the motorcycle. This prevents:
  - (a) the possibility of accidentally turning the engine over while partially disassembled.
  - (b) sparks at electrical connections which will occur when they are disconnected.
  - (c) damage to electrical parts.
- (3) **Tightening Sequence**

Generally, when installing a part with several bolts, nuts, or screws, start them all in their holes and tighten them to a snug fit. Then tighten them evenly in a cross pattern. This is to avoid distortion of the part and/or causing gas or oil leakage. Conversely when loosening the bolts, nuts, or screws, first loosen all of them by about a quarter turn and then remove them. Where there is a tightening sequence indication in this Service Manual, the bolts, nuts, or screws must be tightened in the order and method indicated.
- (4) **Torque**

When torque values are given in this Service Manual, use them. Either too little or too much torque may lead to serious damage. Use a good quality, reliable torque wrench.
- (5) **Force**

Common sense should dictate how much force is necessary in assembly and disassembly. If a part seems especially difficult to remove or install, stop and examine what may be causing the problem. Whenever tapping is necessary, tap lightly using a wooden or plastic-faced mallet. Use an impact driver for screws (particularly for the removal of screws held by a locking agent) in order to avoid damaging the screw heads.
- (6) **Edges**

Watch for sharp edges, especially during major engine disassembly and assembly. Protect your hands with gloves or a piece of thick cloth when lifting the engine or turning it over.
- (7) **High-Flash Point Solvent**

A high-flash point solvent is recommended to reduce fire danger. A commercial solvent commonly available in North America is Stoddard solvent (generic name). Always follow manufacturer and container directions regarding the use of any solvent.
- (8) **Gasket, O-Ring**

Do not reuse a gasket or O-ring once it has been in service. The mating surfaces around the gasket should be free of foreign matter and perfectly smooth to avoid oil or compression leaks.
- (9) **Liquid Gasket, Non-Permanent Locking Agent**

Follow manufacturer's directions for cleaning and preparing surfaces where these compounds will be used. Apply sparingly. Excessive amounts may block engine oil passages and cause serious damage. An example of a non-permanent locking agent commonly available in North America is Loctite Lock'n Seal (Blue).
- (10) **Press**

A part installed using a press or driver, such as a wheel bearing, should first be coated with oil on its outer or inner circumference so that it will go into place smoothly.
- (11) **Ball Bearing and Needle Bearing**

Do not remove any ball or needle bearings that are pressed in unless it is necessary. If they are removed, replace them with new ones.

When installing a bearing, press it in with the marked side facing out using a suitable driver until it is bottomed. Bearings should be pressed into place by pushing evenly the bearing race which is affected by friction.

## 1-4 GENERAL INFORMATION

### Model Identification


#### ZX900-B1 (US and Canada Models) Left Side View:



#### ZX900-B1 (US and Canada Models) Right Side View:



**ZX900-B1 (Europe Model) Left Side View:**

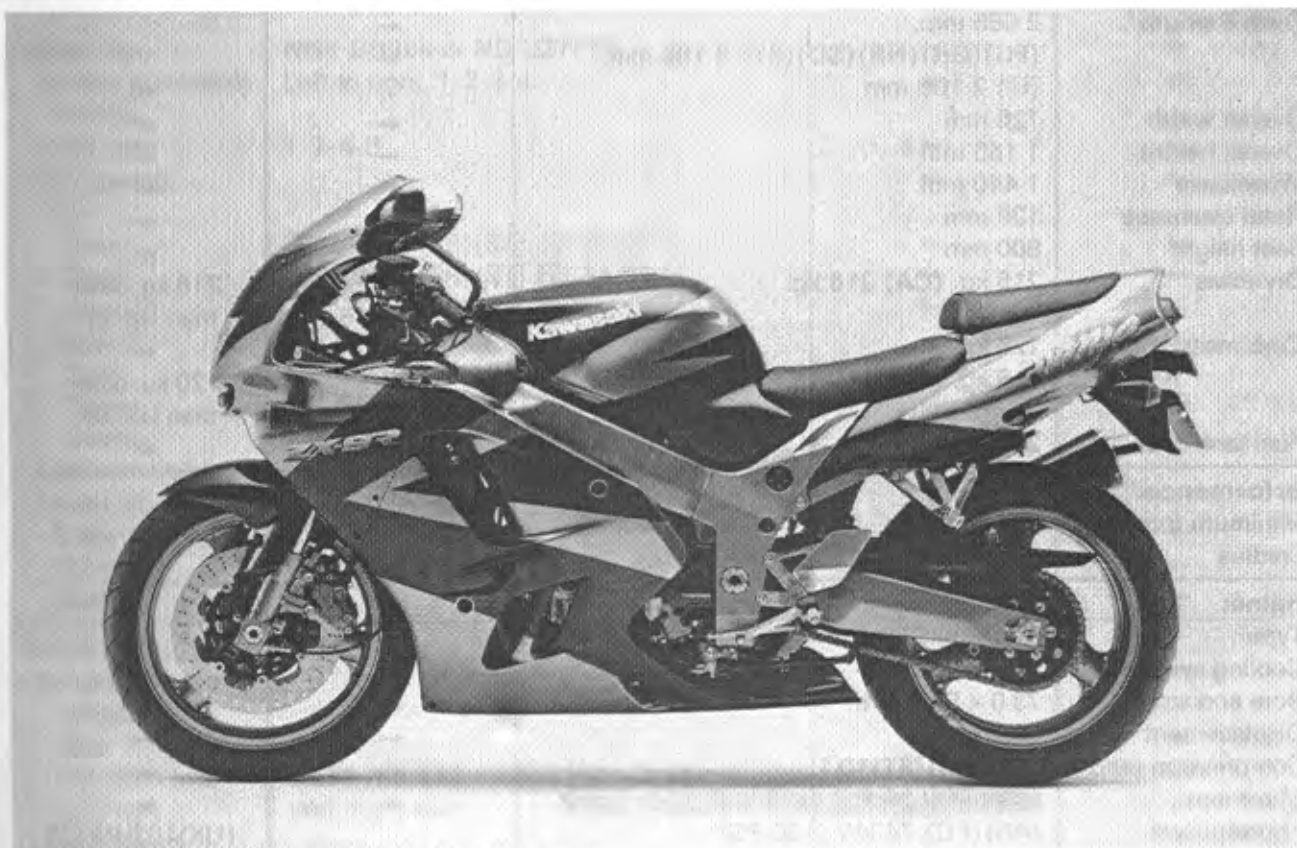

**ZX900-B1 (Europe Model) Right Side View:**



# 1-6 GENERAL INFORMATION

## General Specifications

Items	ZX900-B1	ZX900-B2	ZX900-B3
<b>Dimensions:</b>			
Overall length	2 085 mm, (FG)(GR)(NR)(SD)(ST) 2 195 mm, (IT) 2 105 mm	↑ ↑	↑
Overall width	725 mm	↑	↑
Overall height	1 165 mm	↑	↑
Wheelbase	1 440 mm	↑	↑
Road clearance	125 mm	↑	↑
Seat height	800 mm	↑	↑
Dry mass	215 kg, (CA) 216 kg	↑	218 kg, other than US, CN
Curb mass			↑
Front	125 kg	↑	↑
Rear	118 kg, (CA) 119 kg	↑	120 kg, other than US, CN
Fuel tank capacity	20 L	↑	↑
<b>Performance:</b>			
Minimum turning radius	3.5 m	↑	↑
<b>Engine:</b>			
Type	4-stroke, DOHC, 4-cylinder	↑	↑
Cooling system	Liquid-cooled	↑	↑
Bore and stroke	73.0 x 53.7 mm	↑	↑
Displacement	899 mL	↑	↑
Compression ratio	11.5,(FR)(ST)10.1	↑	↑
Maximum horsepower	102 kW (139 PS) @10 500 r/min (rpm), (AR)(FG) 74 kW (100 PS) @10 000 r/min (rpm)(DIN), (FR) 75.1 kW (102 PS) @9 800 r/min(rpm) (UTAC's norm), (SD) 63 kW (86 PS) @ 10 000 r/min, (ST) 45 kW (61 PS) @6 000 r/min (rpm), (UK) 92 kW (125 PS) @10 500 r/min (rpm)(ISO), (US) ---	↑	(UK)102kW(139 PS) @10 500 r/min(rpm) (FG)72kW(98 PS)@1000 r/min(rpm)
Maximum torque	96 N-m(9.8 kg-m, 70.9 ft-lb) @9 000 r/min(rpm), (FG)78 N-m(8.0 kg-m, 57.5 ft-lb) @7 000 r/min (rpm) (DIN), (AR) 79 N-m (8.1 kg-m, 58.6 ft-lb), @7 000 r/min (rpm) (DIN), (SD) 74 N-m (7.6 kg-m, 55.0 ft-lb) @7 000 r/min (rpm), (ST) 72 N-m (7.3 kg-m, 52.8 ft-lb) @5 500 r/min (rpm), (FR)(UK)(US) ---	↑	(AR)78 N-m(8.0 kg-m,57.0ft-lb) @7000r/min(rpm) (FG)77N-m(7.9kg-m, 57.0ft-lb)@7000 r/min(rpm)(DIN)
Carburetion system	Carburetors, Keihin CVKD 40 x 4	↑	↑
Starting system	Electric starter		↑
Ignition system	Battery and coil (transistorized)	↑	↑
Timing advance	Electronically advanced(digital igniter)	↑	↑
Ignition timing	From 10° BTDC @1 100 r/min (rpm) to 45° BTDC @5 800 r/min (rpm) (CA) From 10° BTDC @1 300 r/min (rpm) to 45° BTDC @5 800 r/min (rpm), (ST) From 5° BTDC @1 300 r/min (rpm) to 40° BTDC @5 800 r/min (rpm)	↑	↑

137hp

7.9 ft-lb

Items	ZX900-B1	ZX900-B2	ZX900-B3
Spark plug	NGK CR9EK or ND U27ETR	←	↑
Cylinder numbering method	Left to right, 1-2-3-4	←	↑
Firing order	1-2-4-3	←	↑
Valve timing:		←	↑
Inlet			
Open	39° BTDC, (FR)(ST) 20° BTDC	←	↑
Close	69° ABDC, (FR)(ST) 50° ABDC	←	↑
Duration	288°, (FR)(ST) 250°	←	↑
Exhaust			
Open	65° BBDC, (FR)(ST) 50° BBDC	←	↑
Close	35° ATDC, (FR)(ST) 20° ATDC	←	↑
Duration	280°, (FR)(ST) 250°	←	↑
Lubrication system	Forced lubrication (wet sump with cooler)	←	↑
Engine oil:			
Grade	SE, SF or SG class	←	↑
Viscosity	SAE10W-40, 10W-50, 20W-40, or 20W-50	←	↑
Capacity	4.0 L	←	↑
<b>Drive Train:</b>			
Primary reduction system:			
Type	Gear	←	↑
Reduction ratio	1.534 (89/58)	←	↑
Clutch type	Wet multi disc	←	↑
Transmission:			
Type	6-speed, constant mesh, return shift	←	↑
Gear ratios:			
1st	2.857 (40/14)	(E)(FG)(IT)(NL) (SP)(UK)2.785 (39/14)	(AR)(GR)(NR) 2.785(39/14)
2nd	2.055 (37/18)	(E)(FG)(IT)(NL) (SP)(UK)2.000 (36/18)	(AR)(GR)(NR) 2.000(36/18)
3rd	1.650 (33/20)	(E)(FG)(IT)(NL) (SP)(UK)1.619 (34/21)	(AR)(GR)(NR) 1.619(34/21)
4th	1.391 (32/23)	←	↑
5th	1.222 (33/27)	←	↑
6th	1.103 (32/29)	←	↑
Final drive system:			
Type	Chain drive	←	↑
Reduction ratio	2.750 (44/16)	←	↑
Overall drive ratio	4.656 @Top gear	←	↑

## 1-8 GENERAL INFORMATION

Items	ZX900-B1	ZX900-B2	ZX900-B3
<b>Frame:</b>			
Type	Tubular, double cradle		
Caster (rake angle)	24°	←	←
Trail	93 mm	←	←
Front tire:			
Type	Tubeless	←	←
Size	120/70 ZR17	←	←
Rear tire:			
Type	Tubeless	←	←
Size	180/55 ZR17	←	←
Front suspension:			
Type	Telescopic fork	←	←
Wheel travel	110 mm	←	←
Rear suspension:			
Type	Swingarm (uni-trak)	←	←
Wheel travel	145 mm	←	135 mm Other than US, CN
Brake type:			
Front	Dual disc	←	←
Rear	Single disc	←	←
<b>Electrical Equipment:</b>			
Battery	12 V 10 Ah	←	←
Headlight:			
Type	Semi-sealed beam	←	
Bulb	12V55/55W (quartz-halogen), (AS)(CA)(CN)(UK)(US) 12 V 60/55 W (quartz-halogen)	←	←
Tail/brake light	12 V 5/21 W × 2, (CA)(CN)(US) 12 V 8/27W × 2	←	←
Alternator:			
Type	Three-phase AC	←	←
Rated output	30.7 A/ 14 V @5 200 r/min (rpm)	←	←

Specifications are subject to change without notice, and may not apply to every country.

(AR) : Austrian Model  
 (AS) : Australian Model  
 (CA) : California Model  
 (CN) : Canadian Model  
 (E) : European Model  
 (FG) : German Model  
 (FR) : French Model  
 (GR) : Greek Model  
 (IT) : Italian Model  
 (NL) : Dutch Model  
 (NR) : Norwegian Model

(SD): Swedish Model  
 (SP) : Spanish Model  
 (ST) : Swiss Model  
 (UK): U.K. Model  
 (US): U.S. Model